




PARTS MANUAL

BRON DL375 PLOW

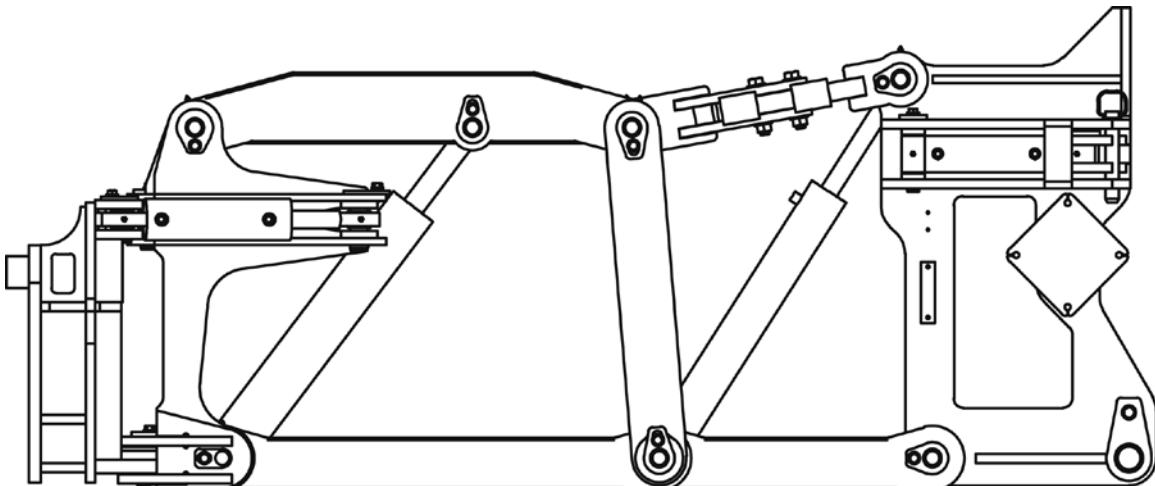


RWF INDUSTRIES

873 Devonshire Ave., Woodstock,
Ontario N4S 8Z4
Tel: (519) 421-0036
Toll Free: 1-800-263-1060
Fax: (519) 421-0028
Email: parts@rwfbron.com

PLOW BREAKDOWN

TABLE OF CONTENTS

BACKPLATE	1
FRONT MAST	2
UPPER LINK.....	3
REAR LOWER LINK.....	4
VERTICAL LINK	5
SLIDER LINK.....	6
LOWER LINK.....	7
BLADE HOLDER	8
SWING CYLINDER.....	9
LIFT CYLINDER.....	10
BLADE LOCK CYLINDER.....	11
DECALS	12

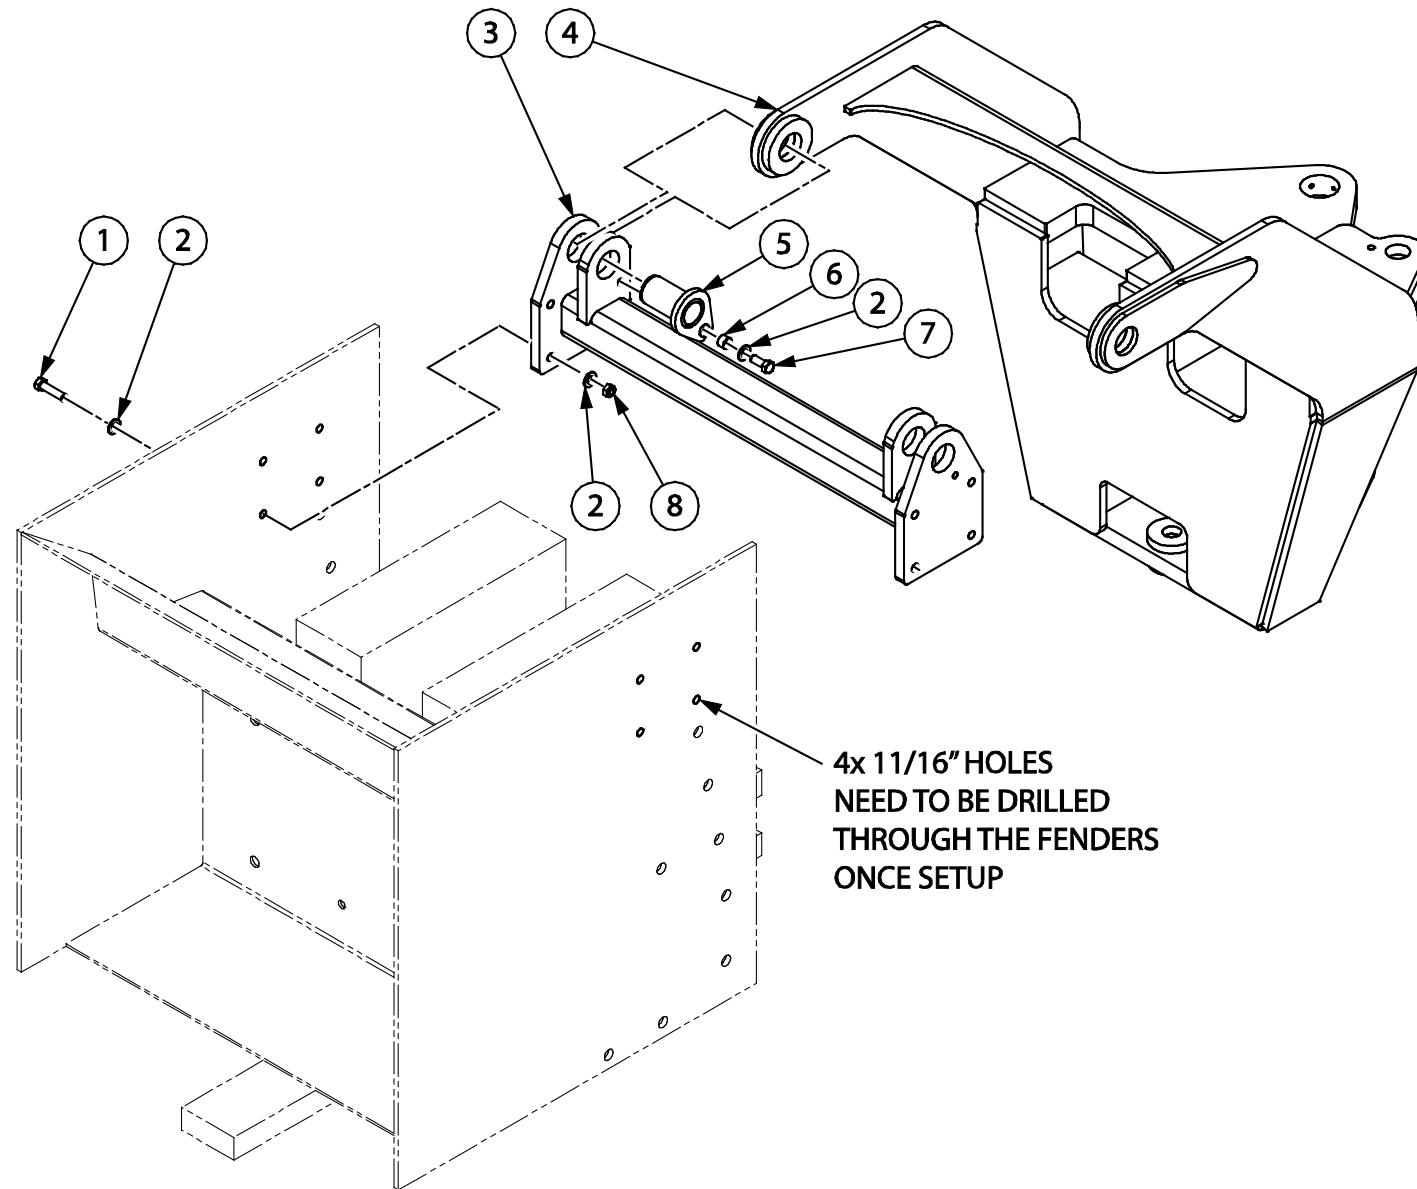


rwf_0440

1 BACKPLATE INSTALLATION (CASE QUAD-TRACK SHOWN FOR ILLUSTRATIVE PURPOSES ONLY)

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	8	80094	HEX HEAD BOLT
2	18	80581	WASHER
3	1	29450	CASE 535 CROSS MEMBER
4	REF	REF	DL375 CASE QUAD-TRACK BACKPLATE
5	2	17838	PIN ASSEMBLY
6	2	114862	BOLT SPACER
7	2	80090	HEX HEAD BOLT
8	8	80516	LOCK NUT

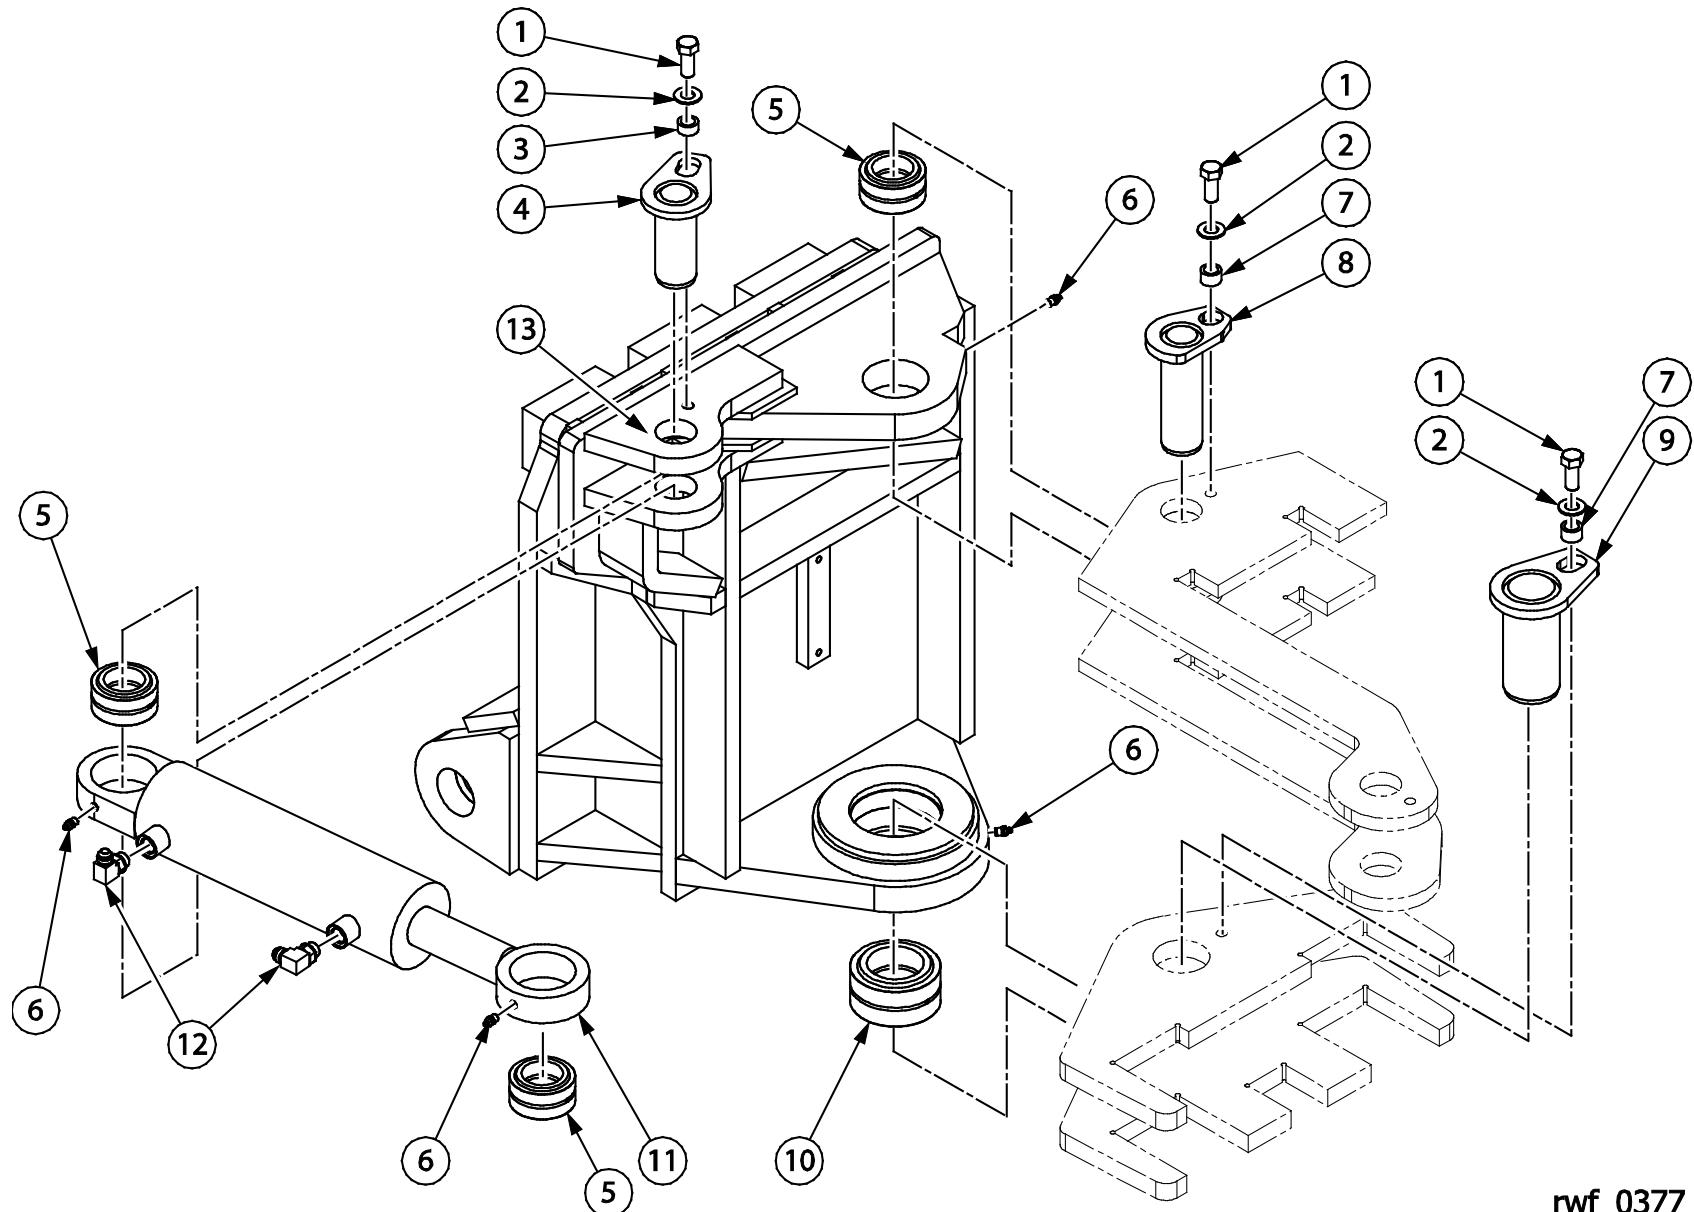


rwf_0377

1 BACKPLATE (BRON 150 SHOWN FOR ILLUSTRATIVE PURPOSES ONLY)

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	3	80090	HEX HEAD BOLT
2	3	80581	WAHSER
3	1	115057	BOLT SPACER
4	1	13891	PIN ASSEMBLY
5	3	15459	SWIVEL BUSHING
6	4	80680	STRAIGHT GREASE FITTING
7	2	114862	BOLT SPACER
8	1	133837	PIN ASSEMBLY
9	1	133925	PIN ASSEMBLY
10	1	12004	SWIVEL BUSHING
11	1	128610	SWING CYLINDER (SEE SECTION 9 FOR ASSEMBLY BREAKDOWN)
12	2	90246	90° ADAPTER
13	REF	REF	BRON 150 BACKPLATE

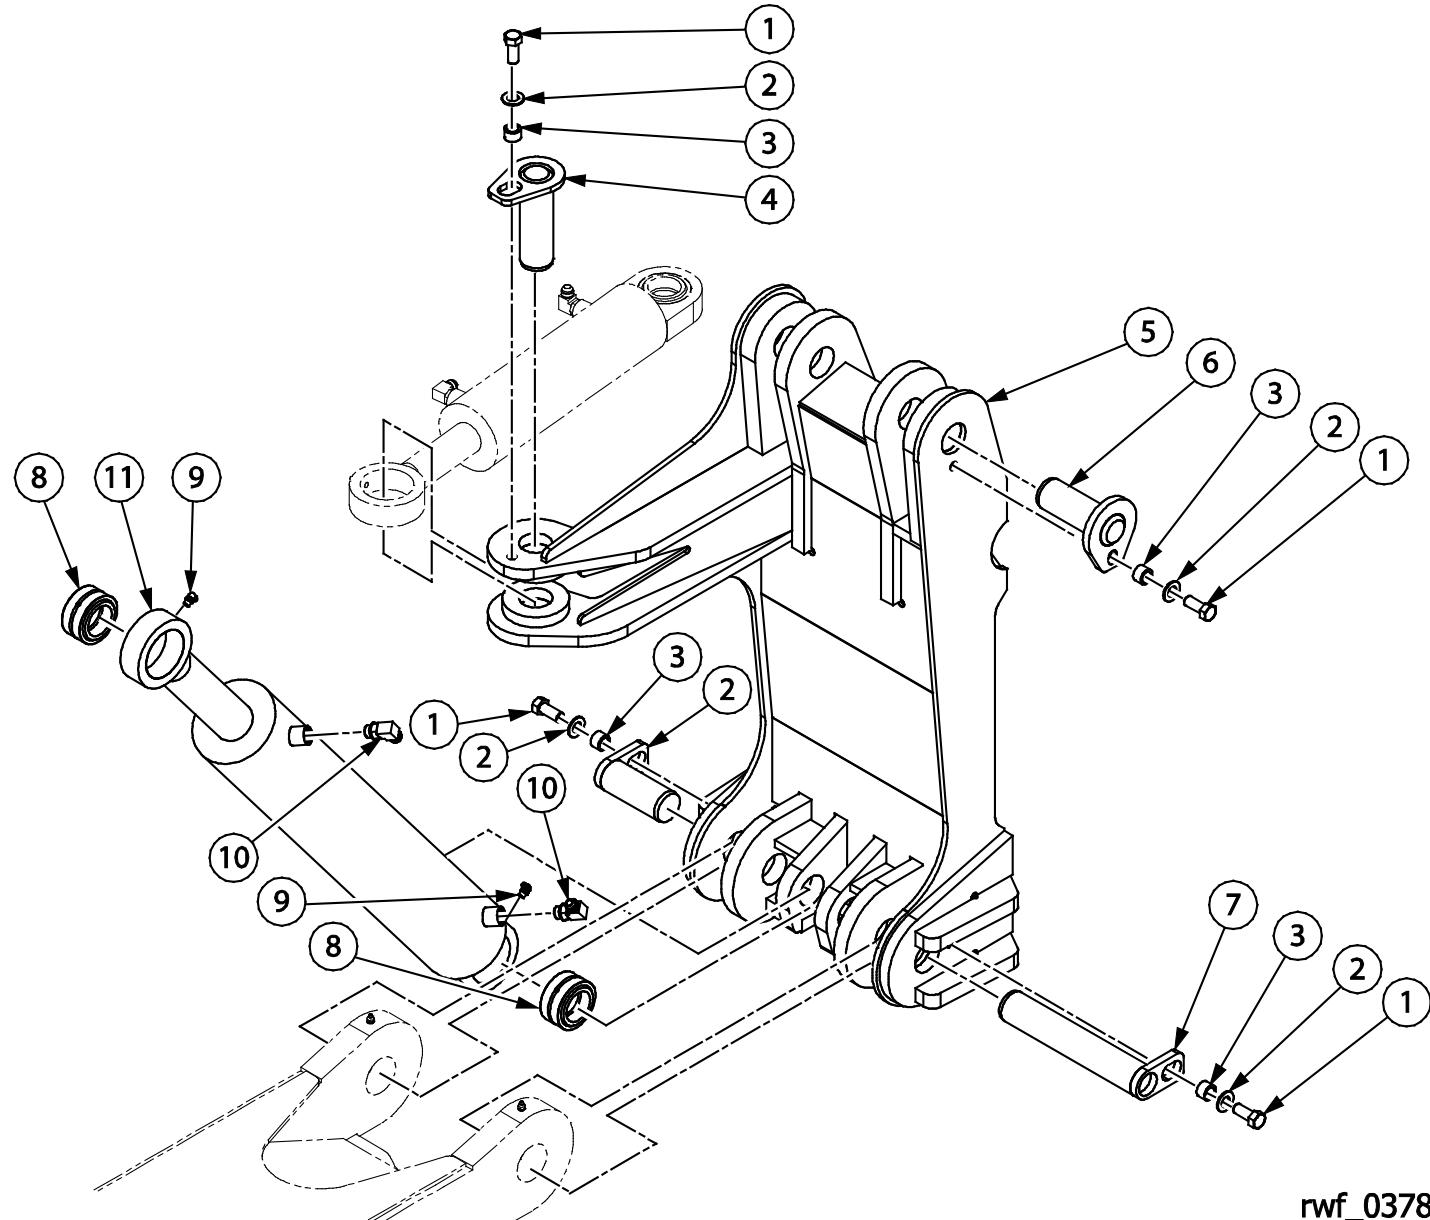

rwf_0378

2 FRONT MAST

DL375


PARTS MANUAL

Item	Quantity	Part Number	Description
1	5	80090	HEX HEAD BOLT
2	5	80581	WASHER
3	5	114862	BOLT SPACER
4	1	117568	PIN ASSEMBLY
5	1	31924	FRONT MAST WELDMENT
6	2	10532	PIN ASSEMBLY
7	1	133839	PIN ASSEMBLY
8	2	15459	SWIVEL BUSHING
9	2	80682	90° GREASE FITTING
10	2	90246	90° STRAIGHT ADAPTER
11	1	128608	LIFT CYLINDER (SEE SECTION 10 FOR ASSEMBLY BREAKDOWN)
12	1	133844	PIN ASSEMBLY

3 UPPER LINK

DL375

PARTS MANUAL

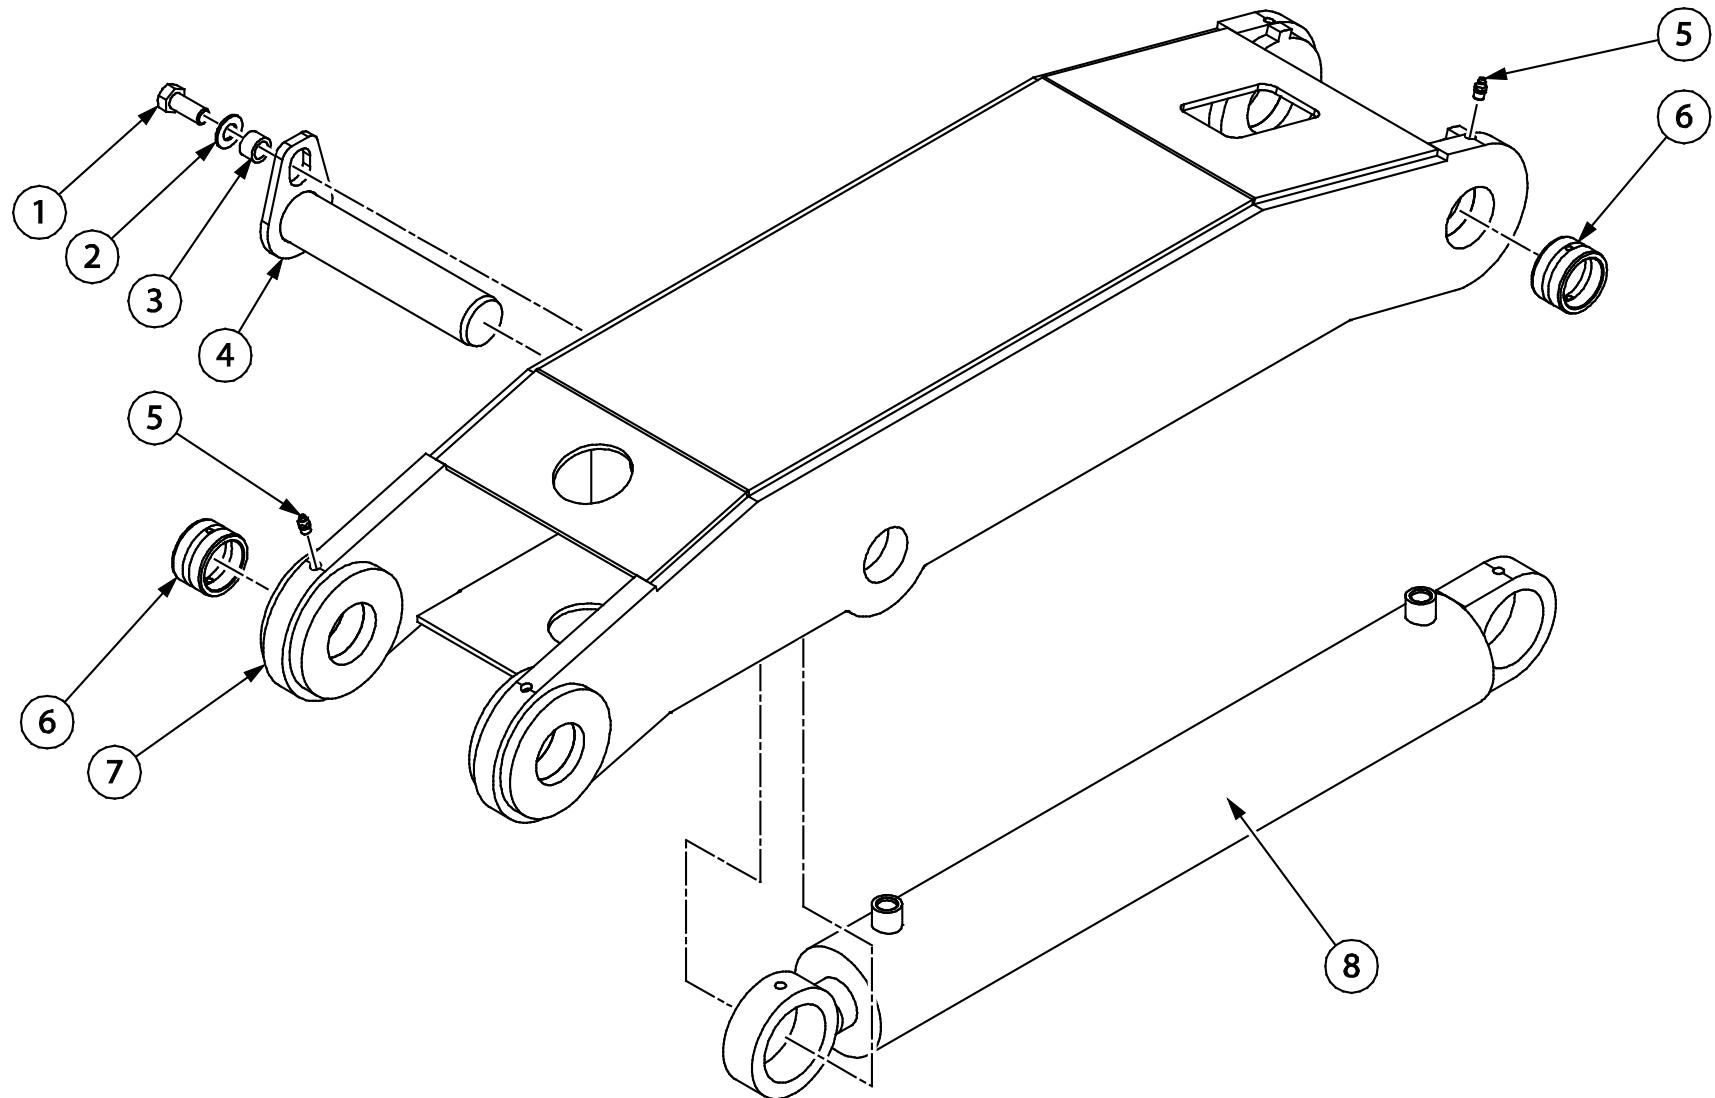

rwf_0380

3 UPPER LINK

DL375


PARTS MANUAL

Item	Quantity	Part Number	Description
1	1	80090	HEX HEAD BOLT
2	1	80581	WASHER
3	1	114862	BOLT SPACER
4	1	10496	PIN ASSEMBLY
5	4	80680	STRAIGHT GREASE FITTING
6	4	15352	BUSHING
7	1	23859	FRONT TOP LINK WELDMENT
8	1	128609	ATTITUDE CYLINDER
9	1	123814	<ul style="list-style-type: none">• SEAL KIT
10	2	15459	<ul style="list-style-type: none">• SWIVEL BEARING

4 REAR LOWER LINK

DL375

PARTS MANUAL

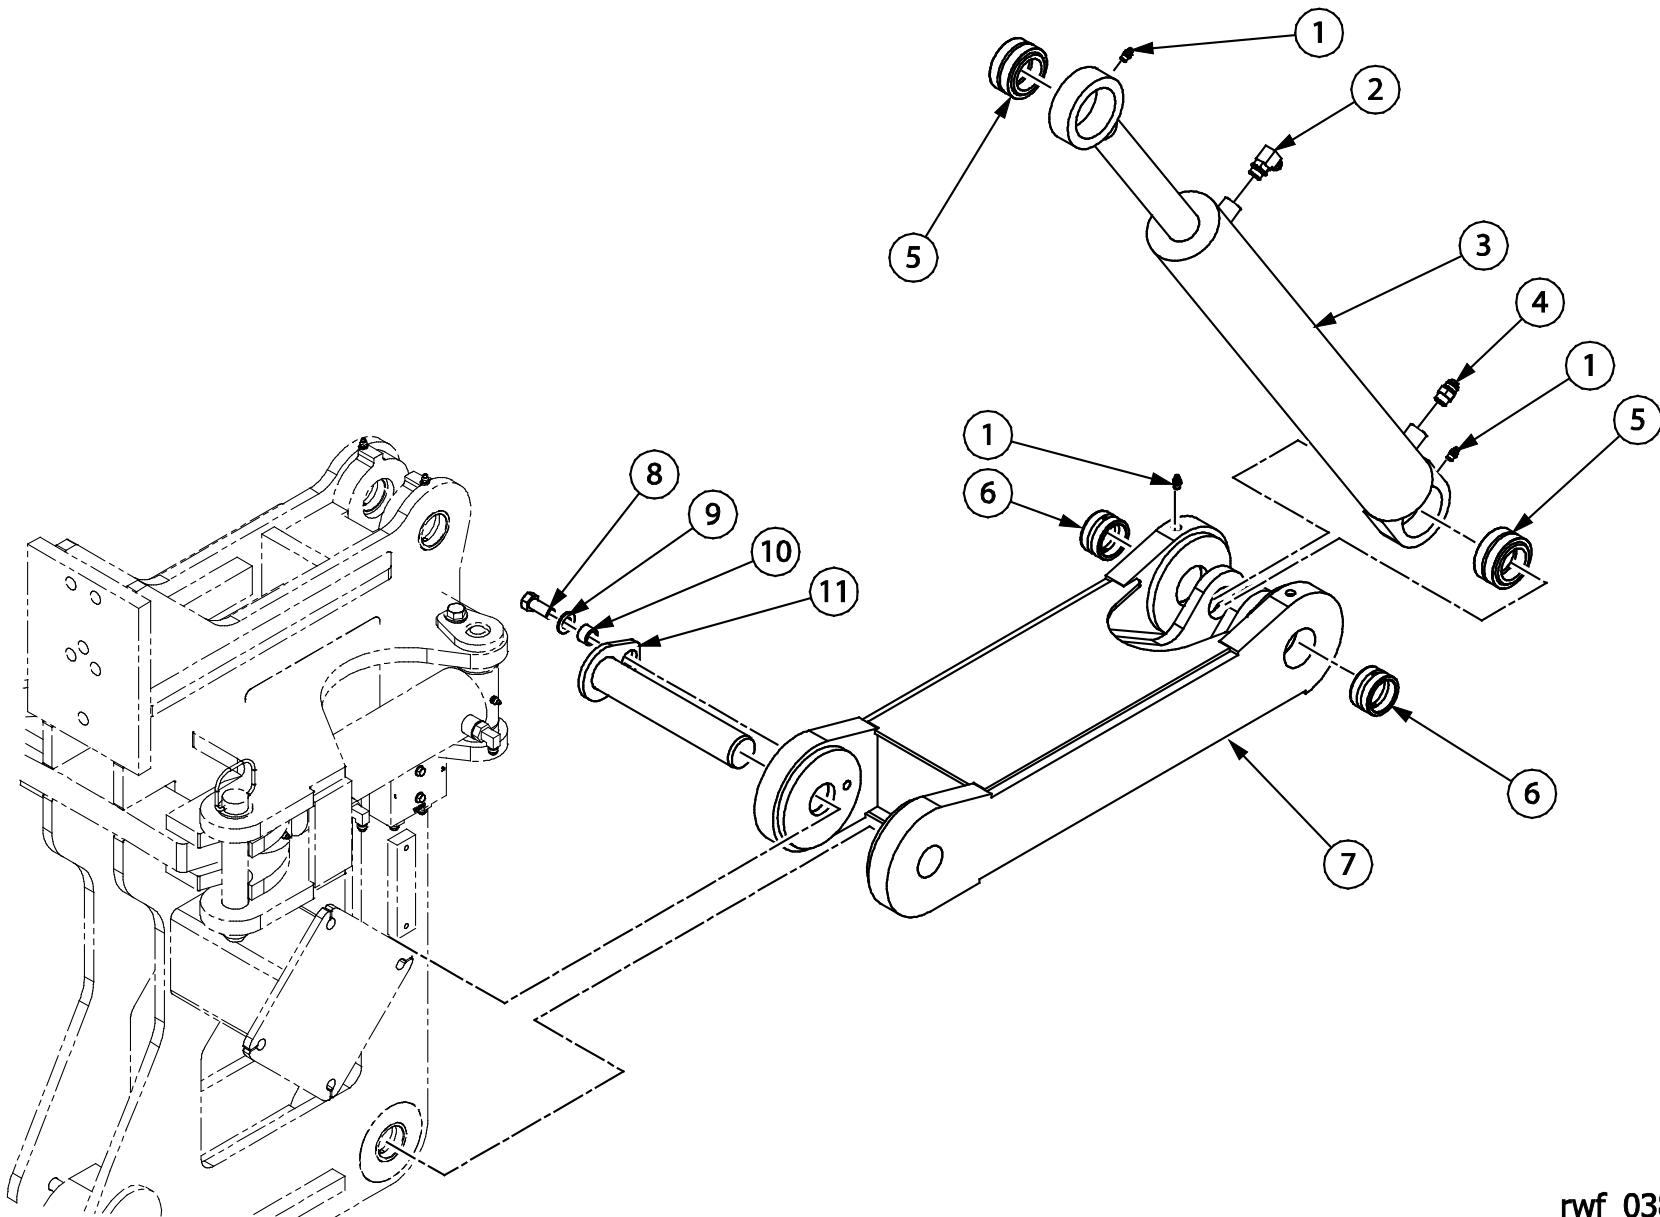

rwf_0384

4 REAR LOWER LINK

DL375


PARTS MANUAL

Item	Quantity	Part Number	Description
1	4	80680	Straight Grease Fitting
2	1	90246	90° Adapter
3	1	128609	Attitude Cylinder
4	1	90071	Straight Adapter
5	2	15459	Swivel Bushing
6	2	15352	Bushing
7	1	23863	Rear Bottom Link Weldment
8	1	80090	Hex Head Bolt
9	1	80581	Washer
10	1	114862	Bolt Spacer
11	1	133846	Pin Assembly

5 VERTICAL LINK

DL375

PARTS MANUAL

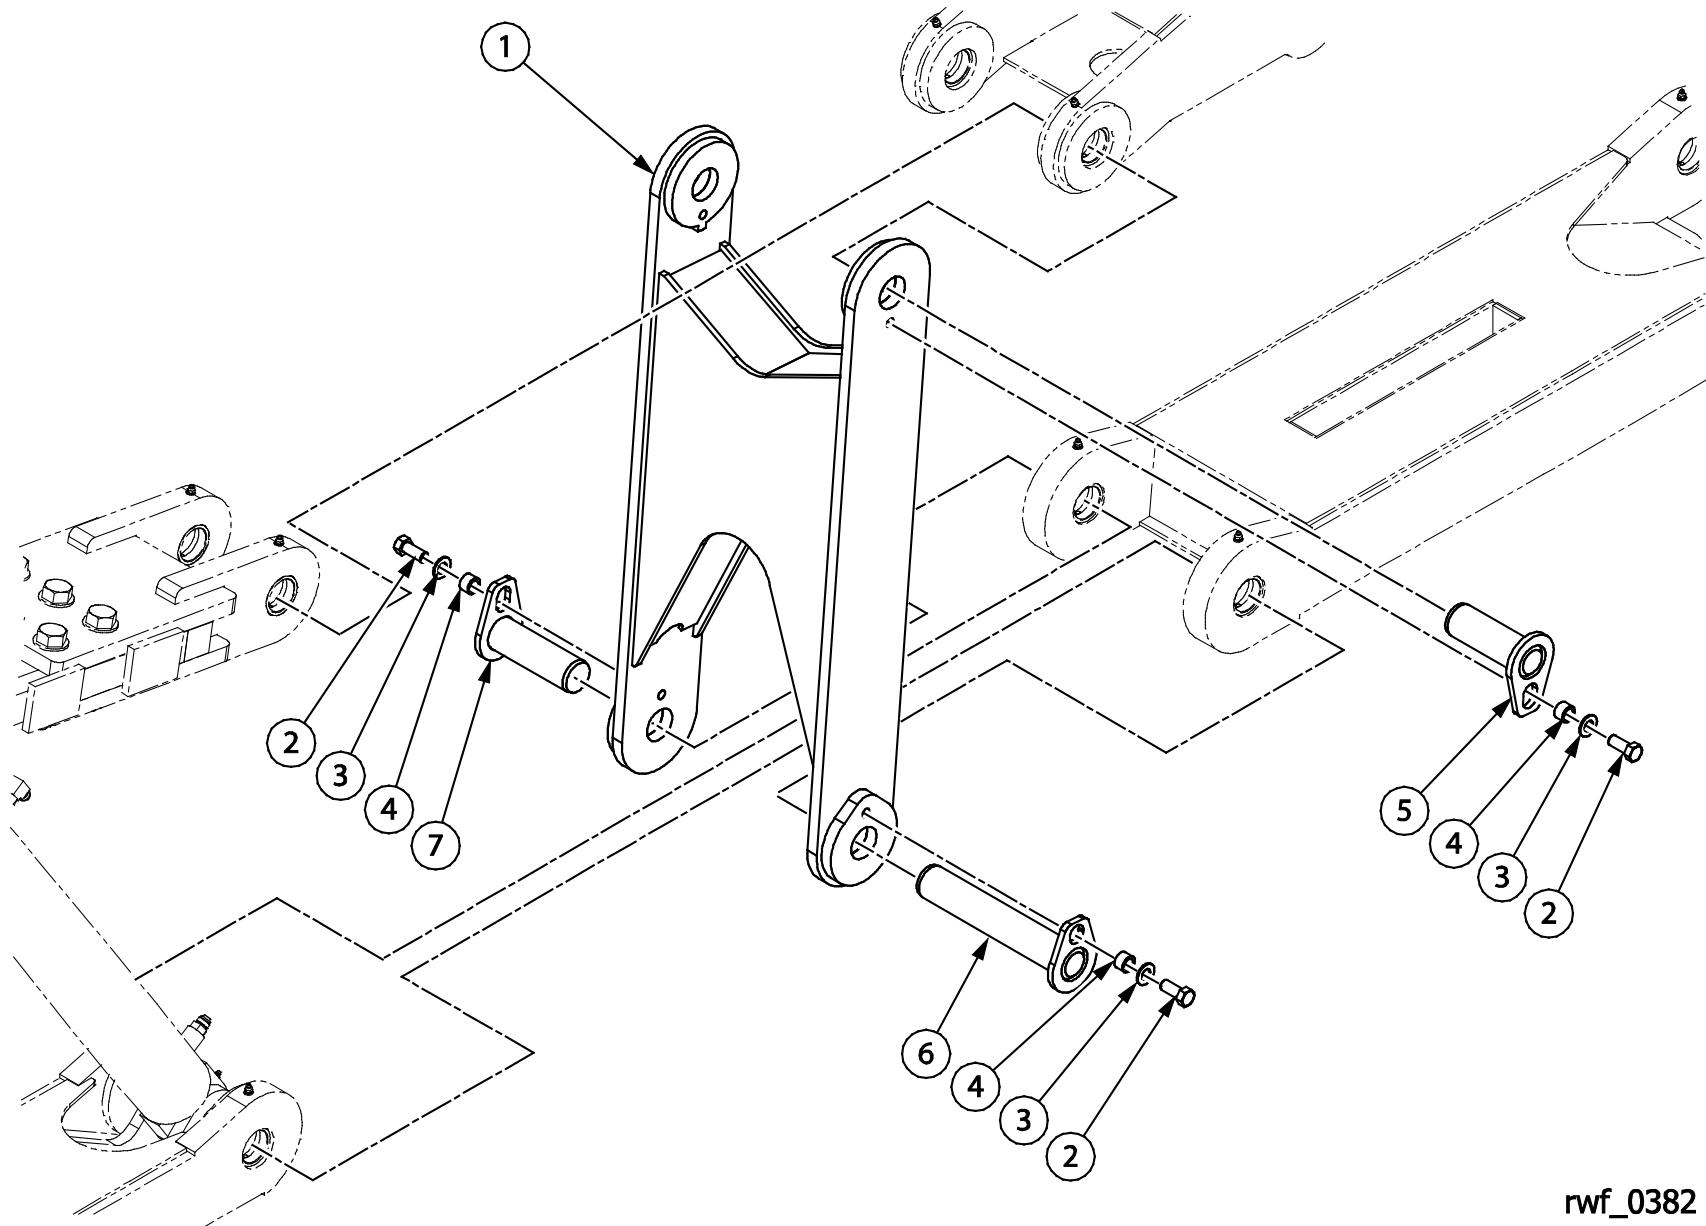


rwf_0382

5 VERTICAL LINK

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	1	23861	VERTICAL LINK WELDMENT
2	4	80090	HEX HEAD BOLT
3	4	80581	WASHER
4	4	114862	BOLT SPACER
5	2	10493	PIN ASSEMBLY
6	1	133846	PIN ASSEMBLY
7	1	117568	PIN ASSEMBLY

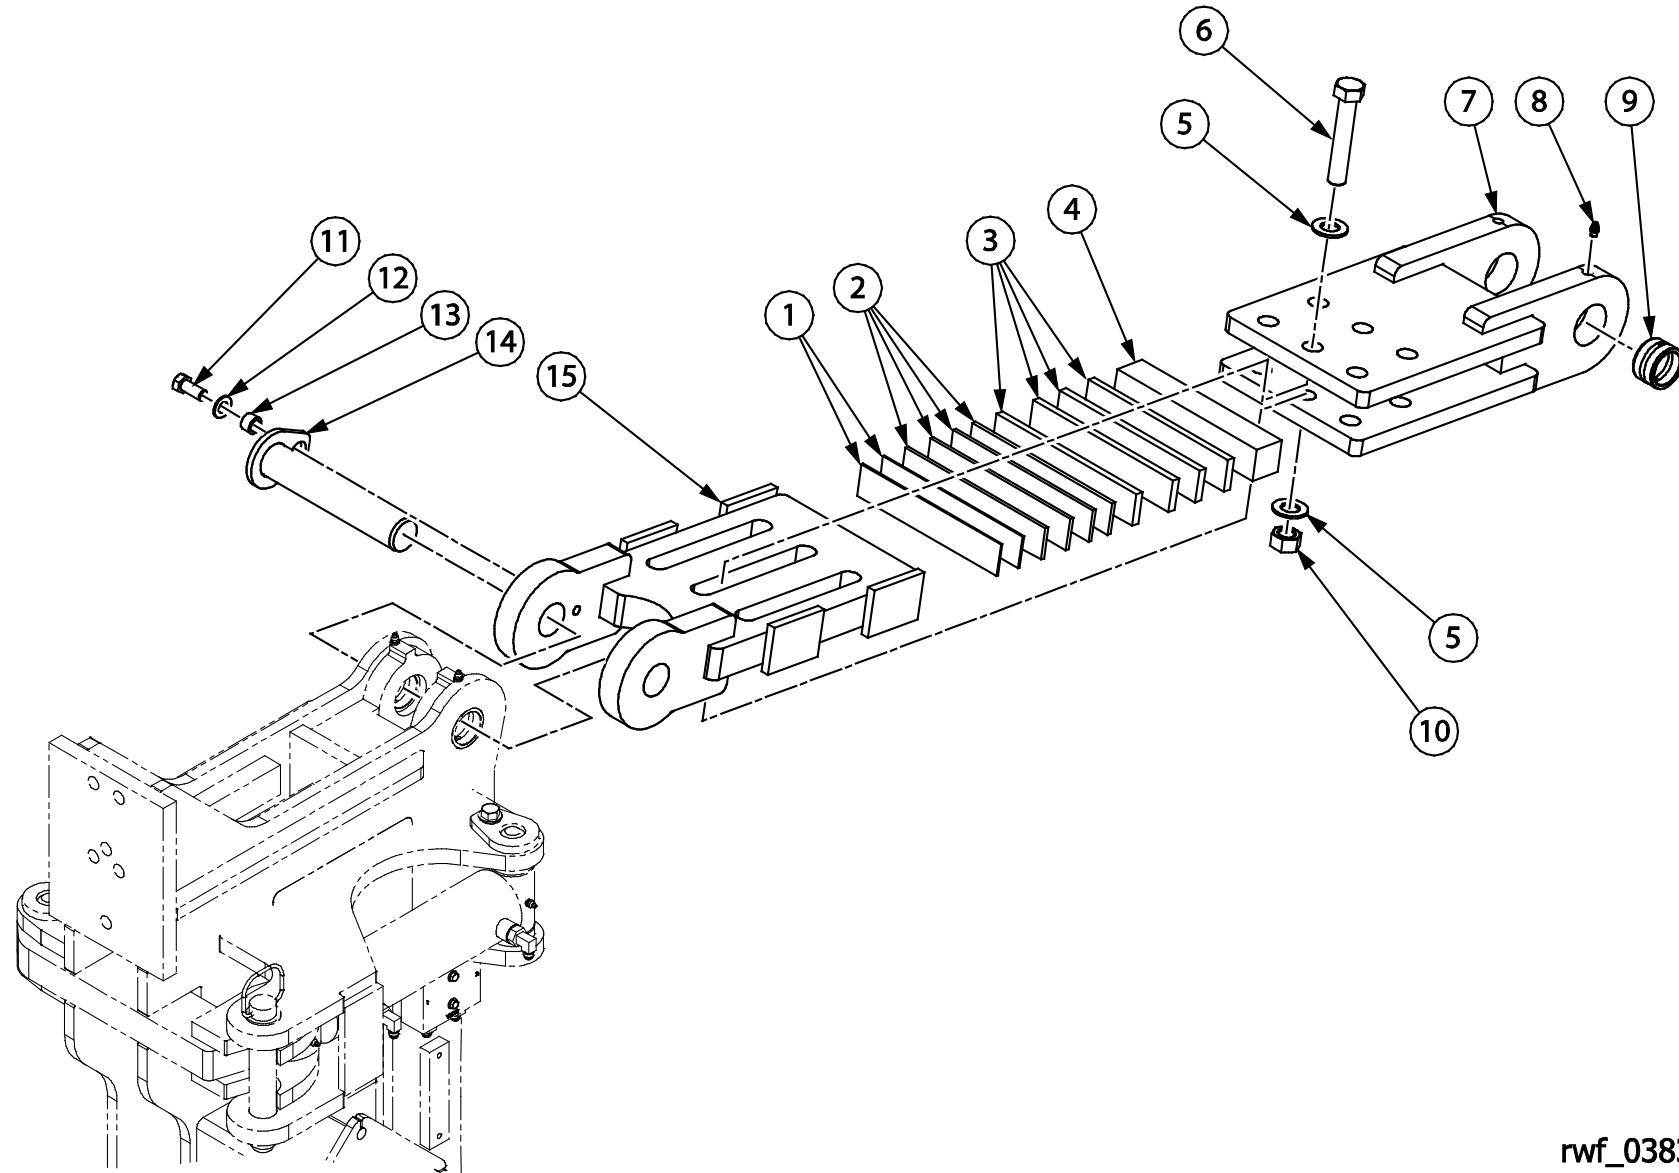


rwf_0383

6 SLIDER LINK

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	2	134029	SHIM PLATE
2	4	134028	SHIM PLATE
3	4	134027	SHIM PLATE
4	1	134026	SHIM PLATE
5	12	80584	WASHER
6	6	80168	HEX HEAD BOLT
7	1	25010	UPPER FEMALE LINK FRONT SLIDER WELDMENT
8	2	80680	STRAIGHT GREASE FITTING
9	2	15459	BUSHING
10	6	80508	NUT
11	1	16311	HEX HEAD BOLT
12	1	80581	WASHER
13	1	114862	BOLT SPACER
14	1	133948	PIN ASSEMBLY
15	1	25009	UPPER MALE LINK REAR SLIDER WELDMENT

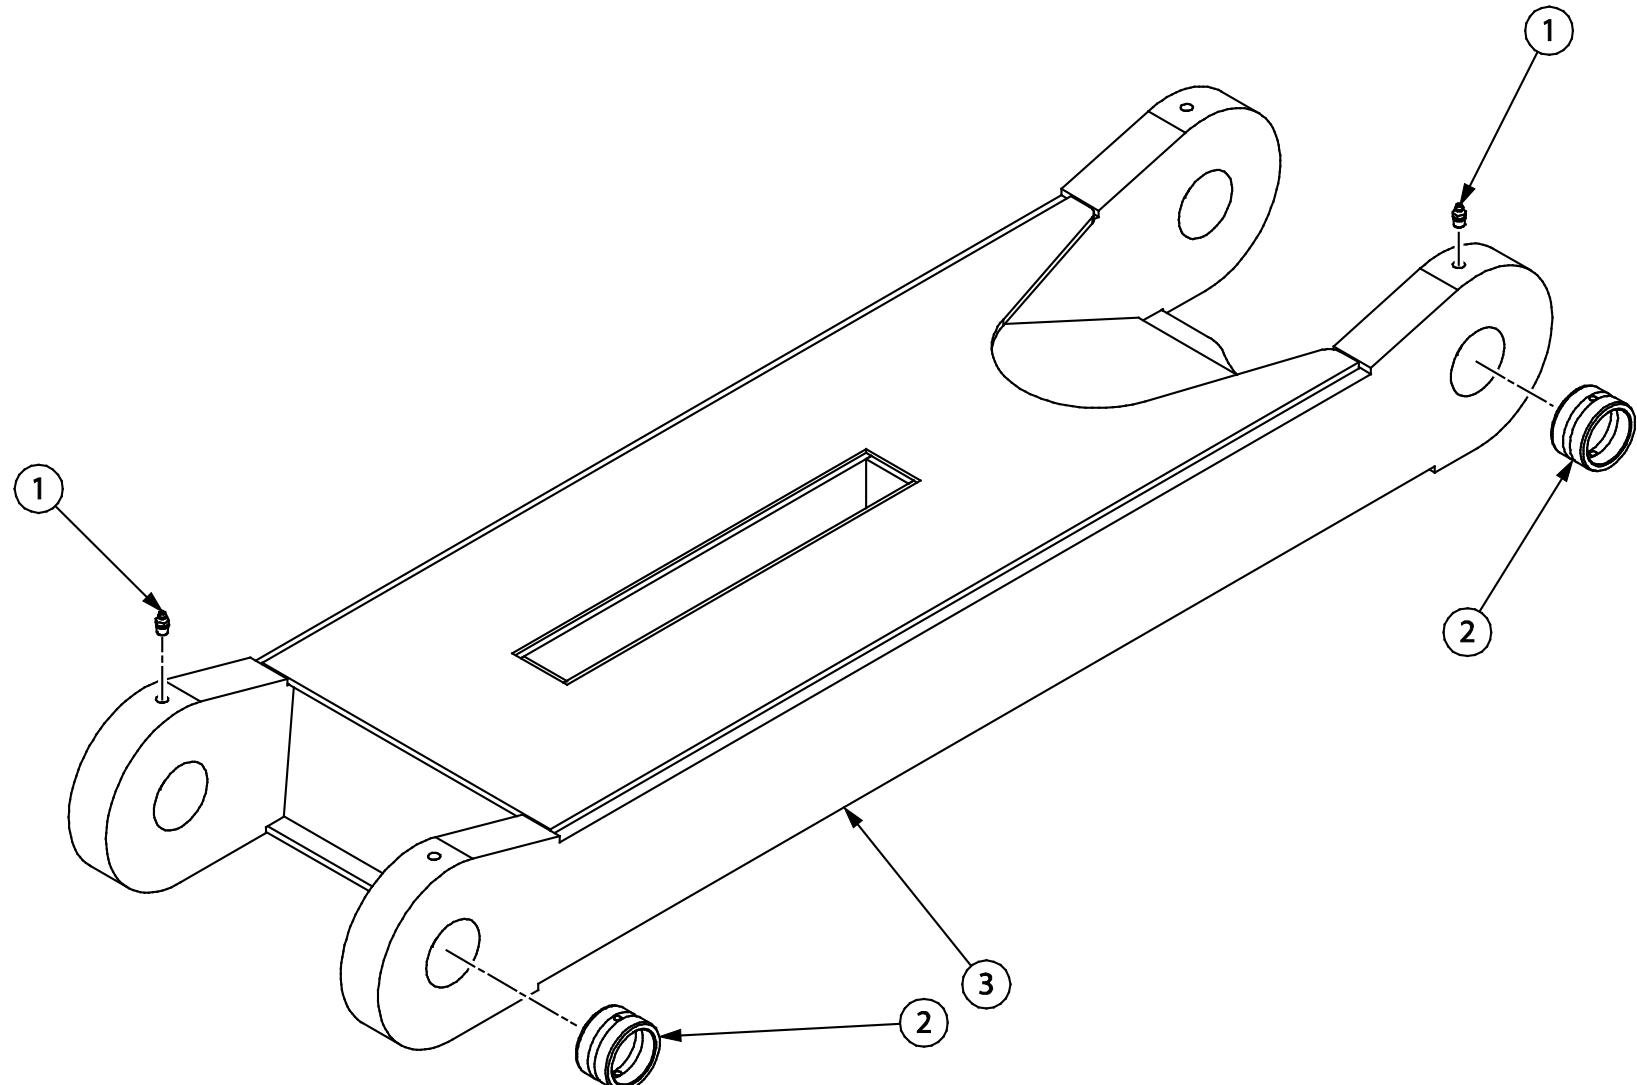

rwf_0381

7 LOWER LINK

DL375


PARTS MANUAL

Item	Quantity	Part Number	Description
1	4	80680	STRAIGHT GREASE FITTING
2	4	15352	BUSHING
3	1	23860	FRONT BOTTOM LINK WELDMENT

8 BLADE HOLDER

DL375

PARTS MANUAL

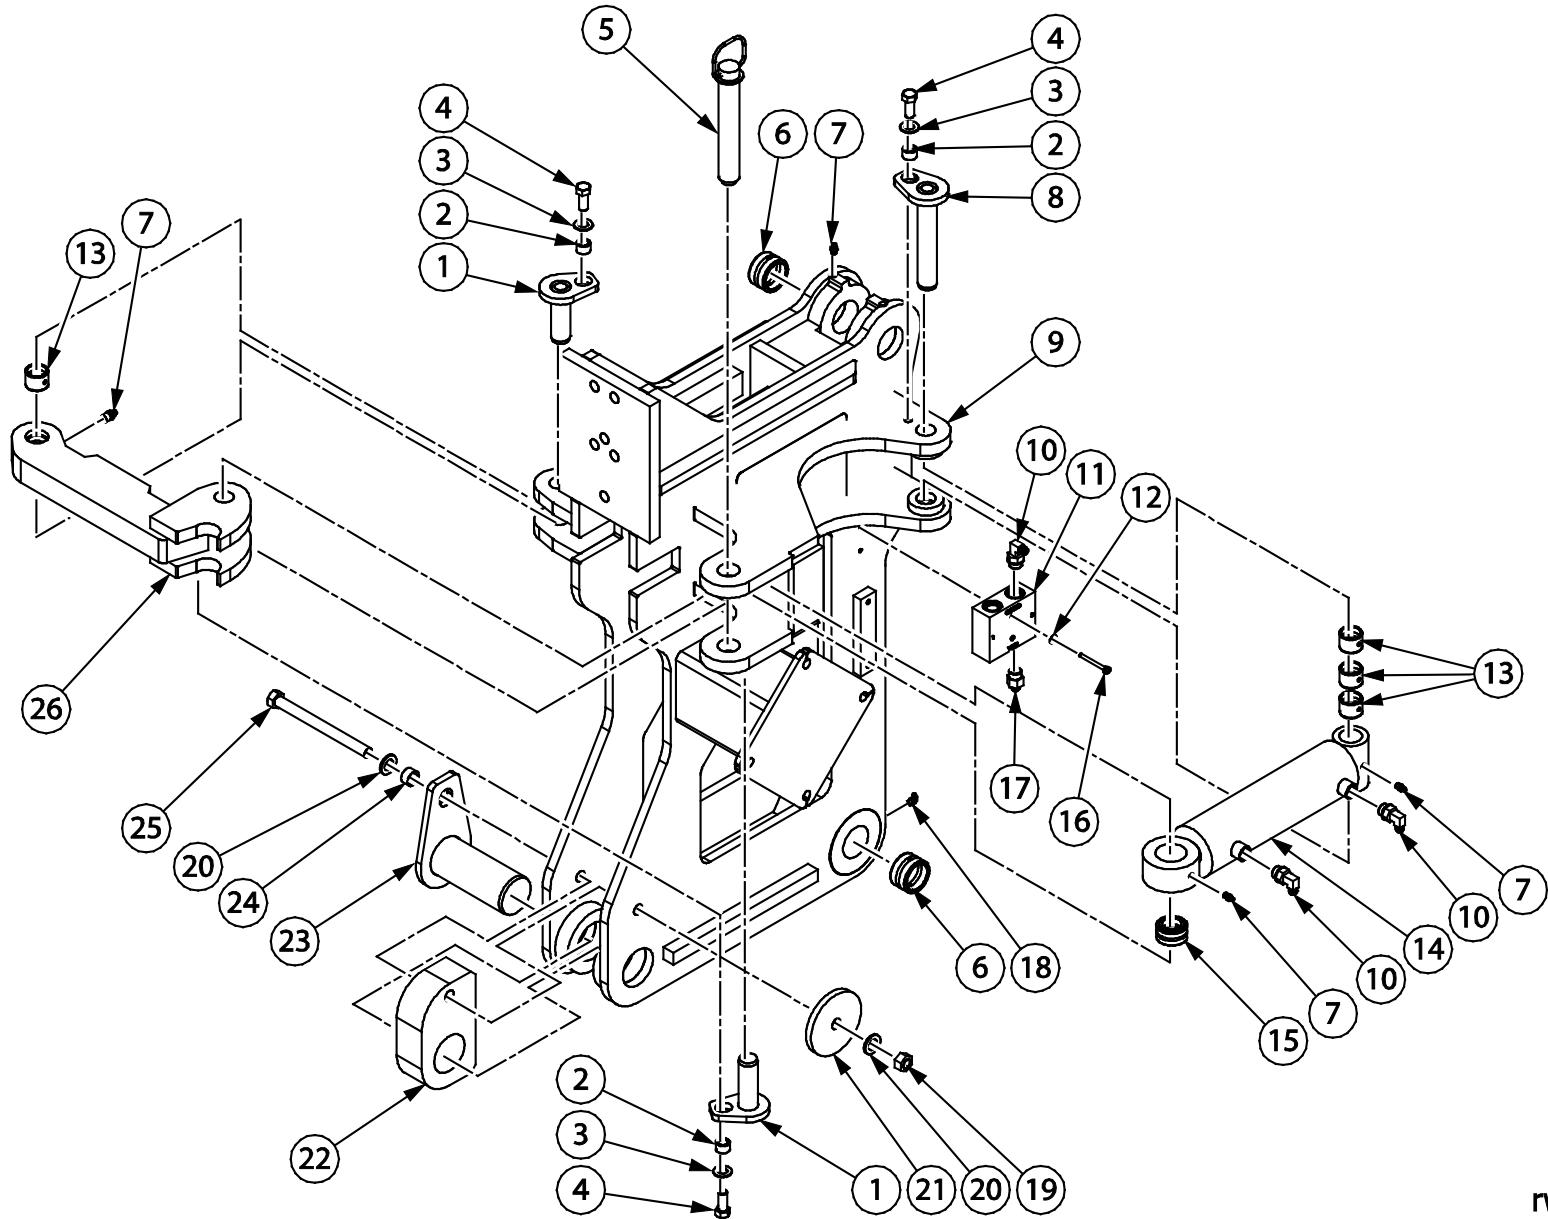

rwf_0385

8 BLADE HOLDER

DL375


PARTS MANUAL

Item	Quantity	Part Number	Description
1	2	114617	PIN ASSEMBLY
2	3	114862	BOLT SPACER
3	3	80581	WASHER
4	3	80090	HEX HEAD BOLT
5	1	9900441	HITCH PIN
6	4	15352	BUSHING
7	5	80680	STRAIGHT GREASE FITTING
8	1	117285	PIN ASSEMBLY
9	1	32860	BLADE HOLDER WELDMENT
10	4	90897	90° ADAPTER
11	1	13161	DOUBLE LOCK VALVE
12	2	80576	WASHER
13	4	16311	BUSHING
14	1	9900433	BLADE LOCK CYLINDER (SEE SECTION 11 FOR ASSEMBLY BREAKDOWN)
15	1	12001	SWIVEL BUSHING
16	2	80007	HEX HEAD BOLT
17	2	90089	STRAIGHT ADAPTER
18	2	80682	90° GREASE FITTING
19	1	80506	NUT
20	2	80582	WASHER
21	1	134264	CAP PLATE
22	1	134025	GUIDE BLOCK PLATE
23	1	134266	PIN ASSEMBLY
24	1	115973	BOLT SPACER
25	1	80129	HEX HEAD BOLT
26	1	114615	LOCKING ARM

9 SWING CYLINDER (128610_A)

DL375

PARTS MANUAL

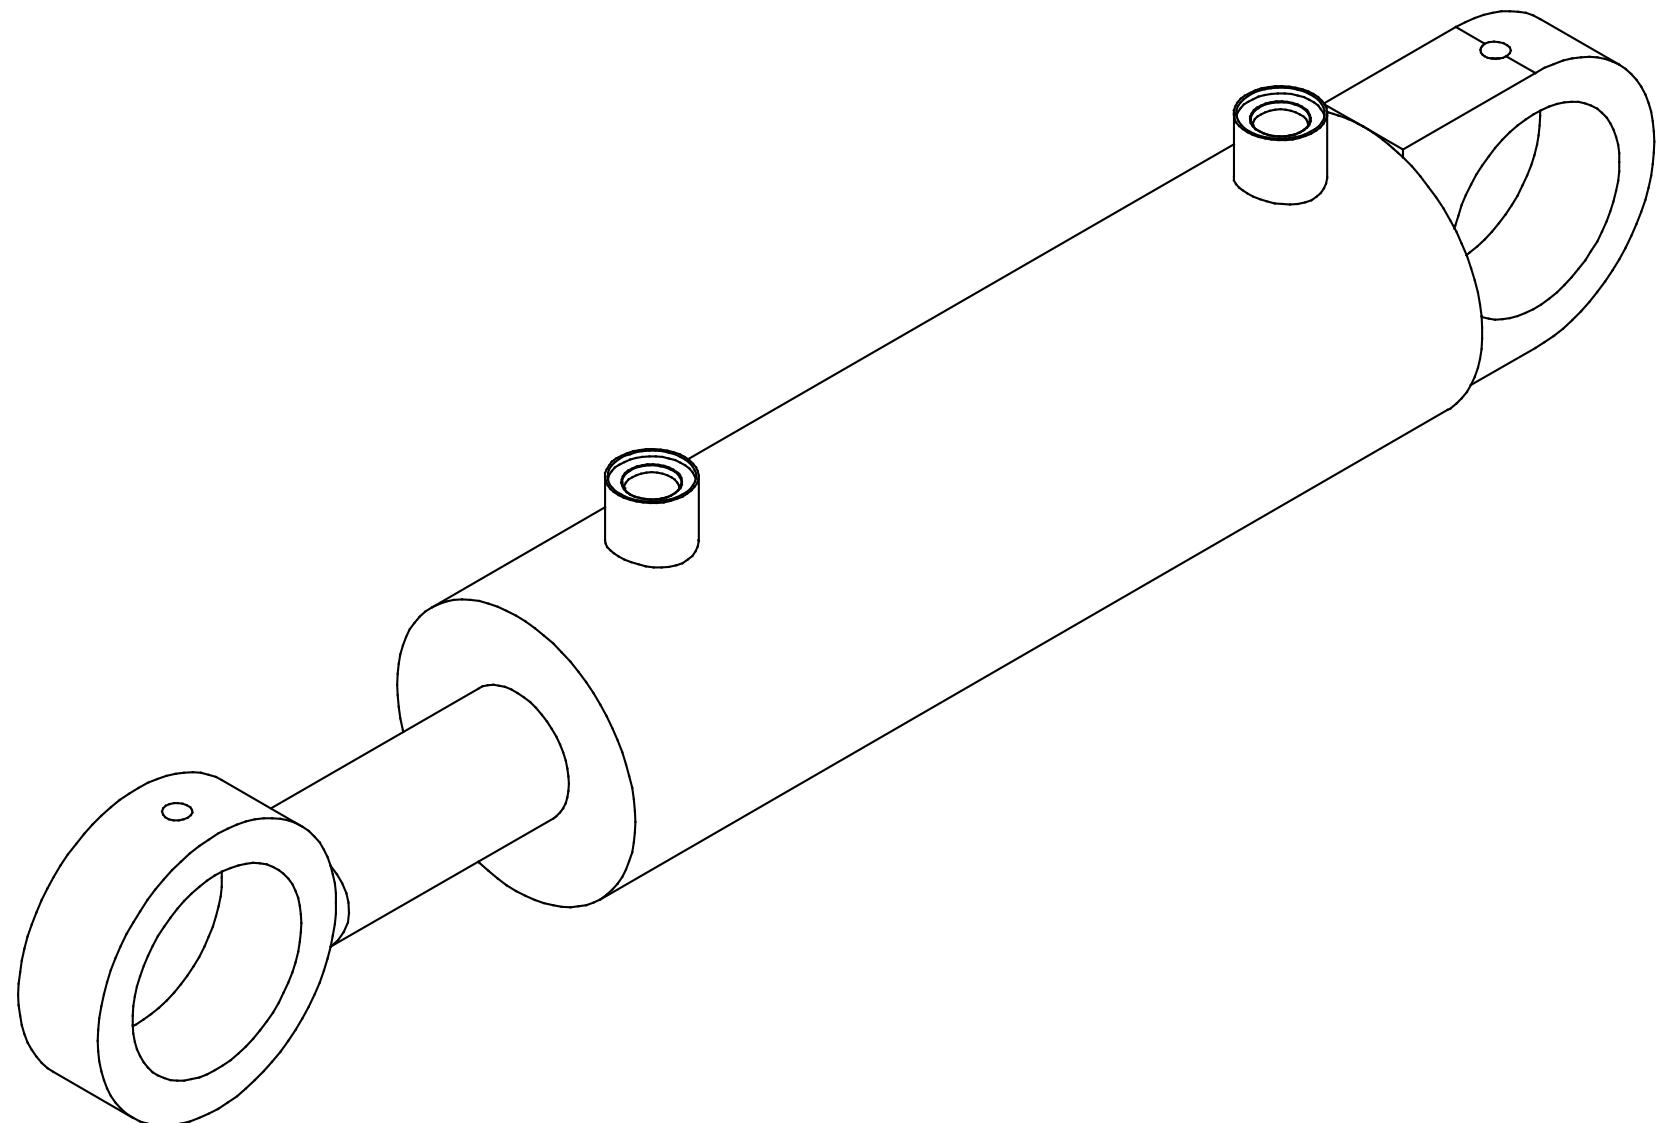


rwf_0442

9 SWING CYLINDER (128610_A)

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	1	123814	SEAL KIT
2	2	15459	SWIVEL BEARING

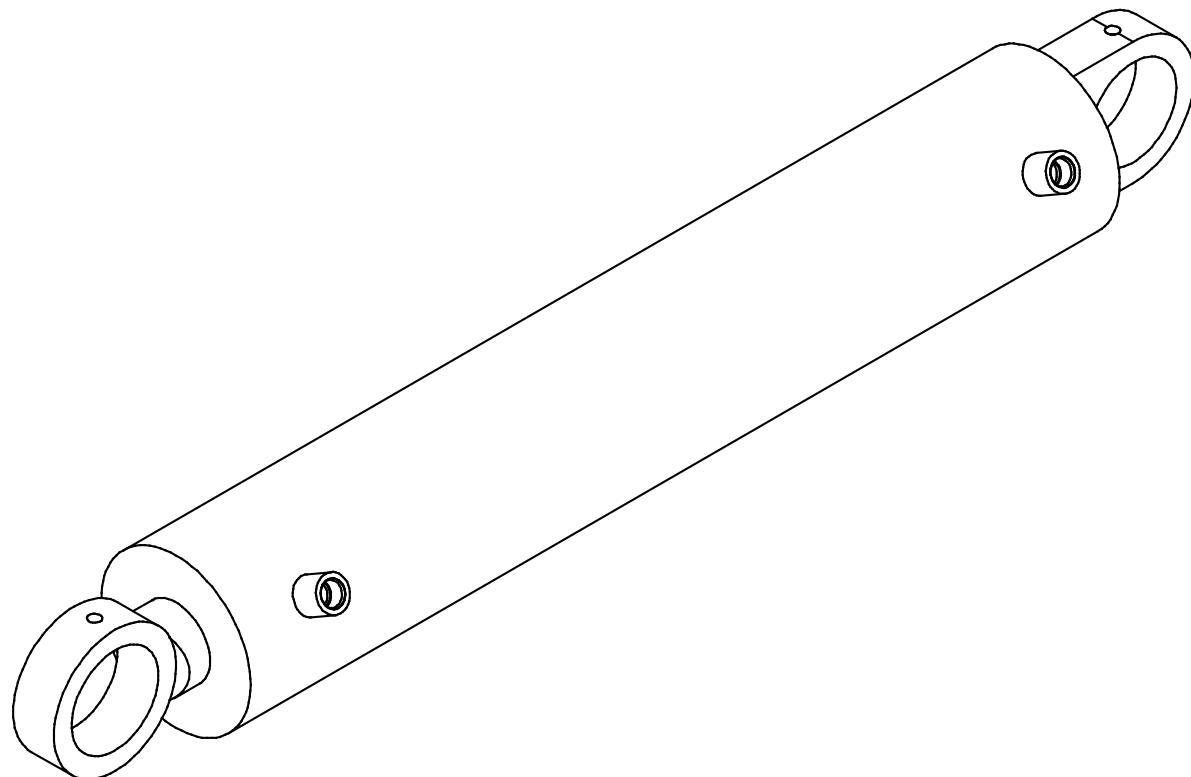


rwf_0443

10 LIFT / GRADE CYLINDER (128608_B)

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	2	15459	SWIVEL BEARING

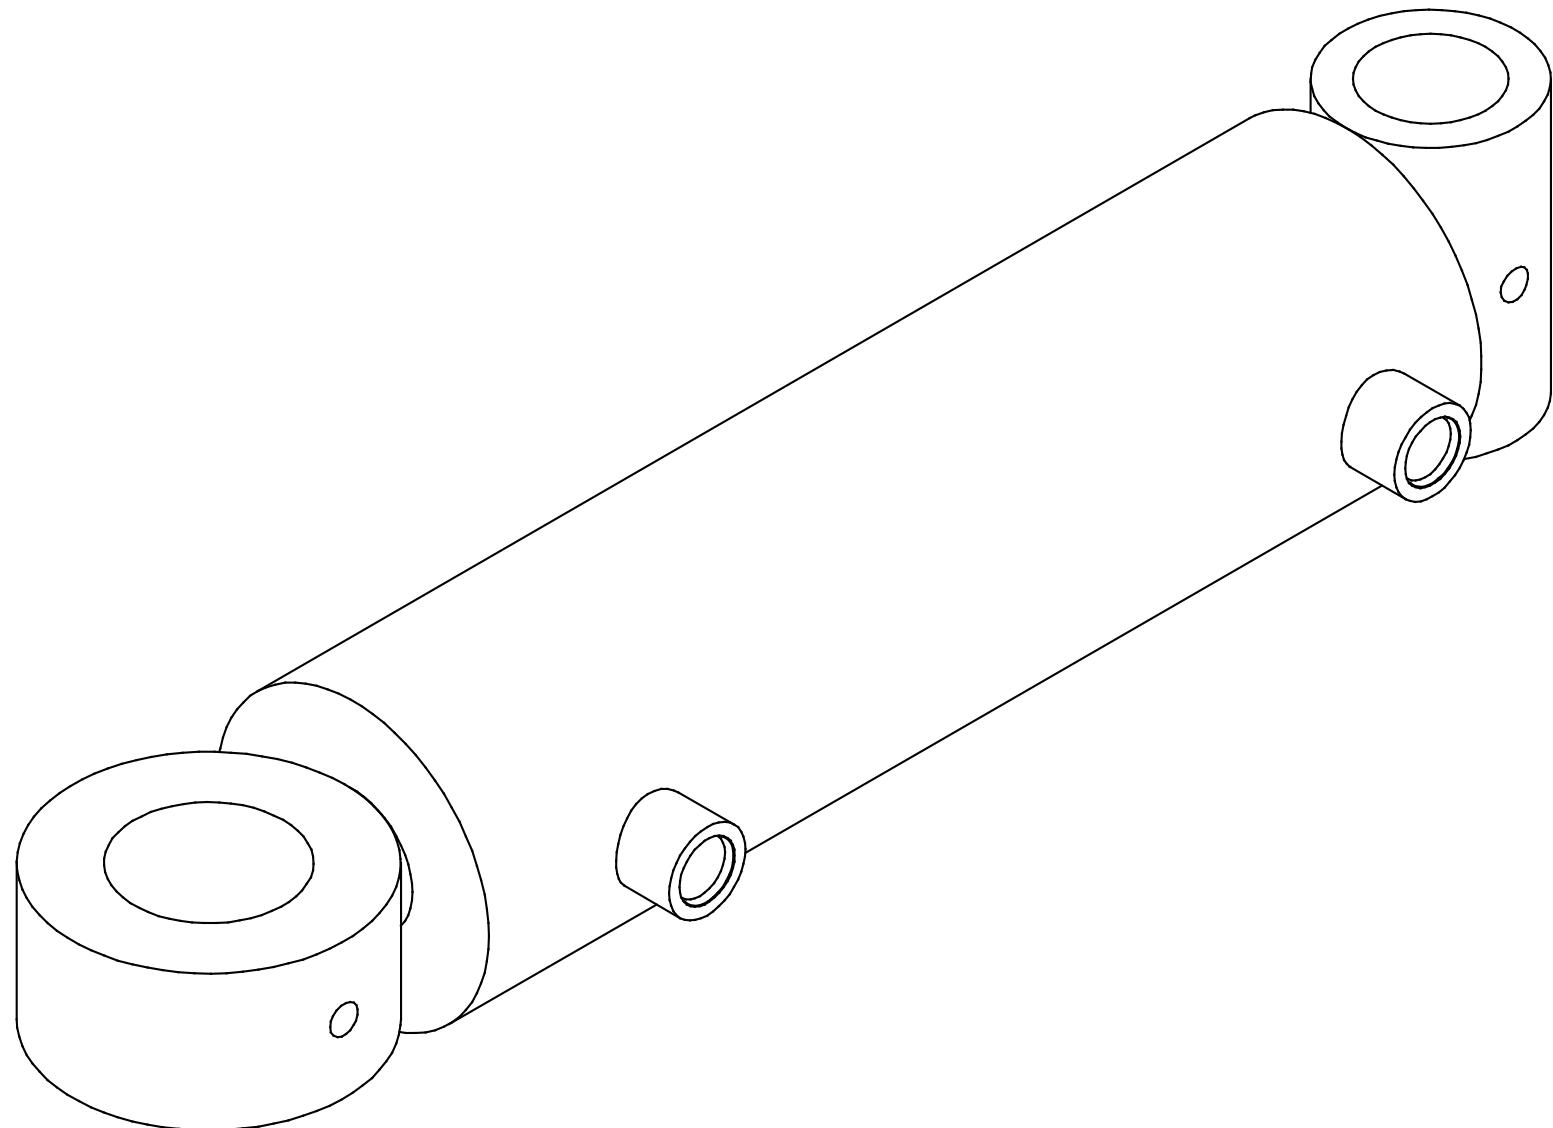


rwf_0444

11 BLADE LOCK CYLINDER (9900433_A)

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	1	140234	ROD-EYE
2	1	14126	SEAL KIT
3	2	16311	BUSHING
4	1	12001	SWIVEL BUSHING

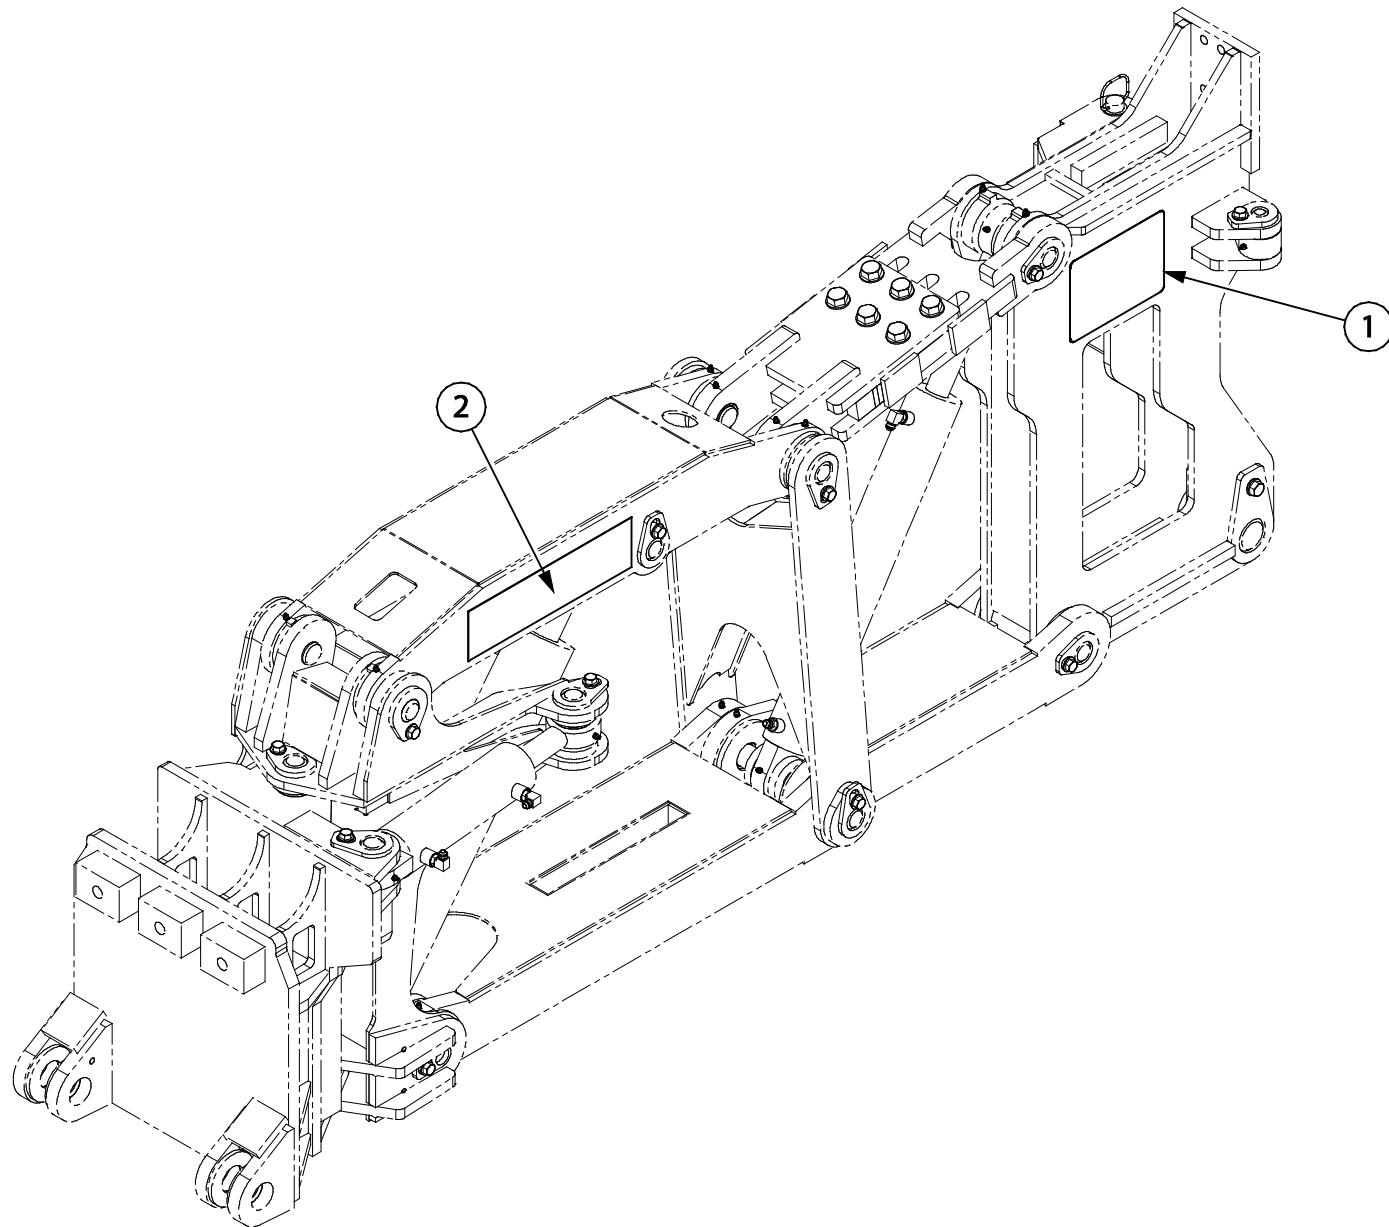

rwf_0386

12 DECALS

DL375

PARTS MANUAL

Item	Quantity	Part Number	Description
1	1	141482	LUBRICATION DECAL
2	2	16927	YELLOW BRON DECAL
2	2	16926	BLACK BRON DECAL