


RWF BRON

V75-III PLOW PARTS MANUAL

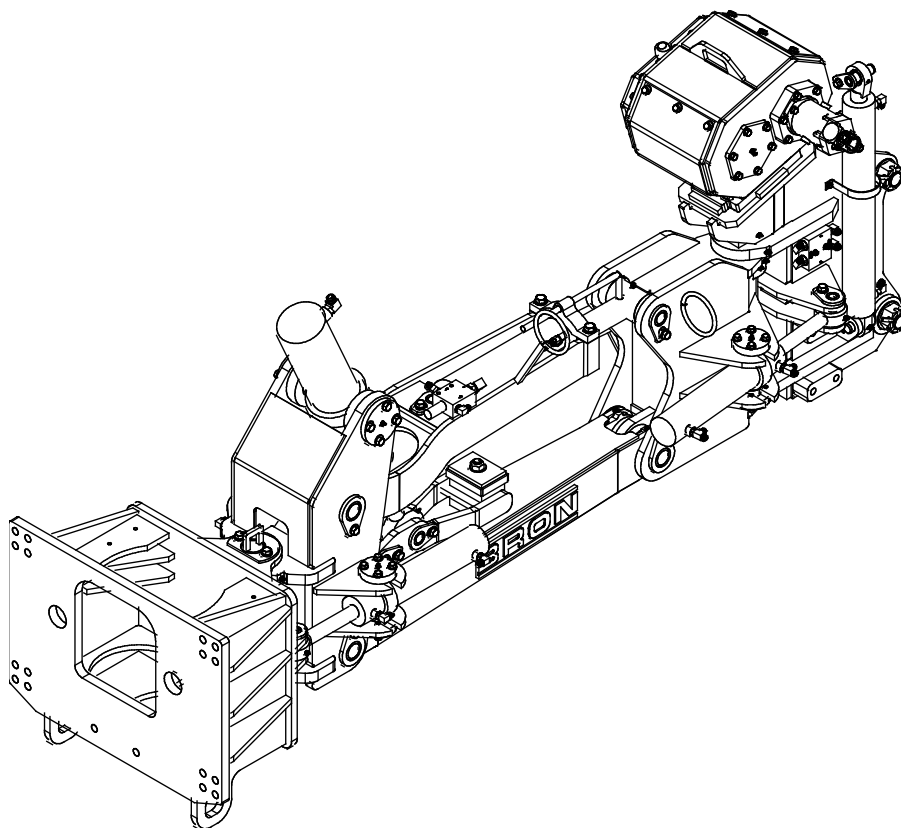

RWF INDUSTRIES

873 Devonshire Ave., Woodstock,

Ontario N4S 8Z4

Tel: (519) 421-0036

Toll Free: 1-800-263-1060

Fax: (519) 421-0028

Email: parts@rwfbron.com

PLOW BREAKDOWN

TABLE OF CONTENTS

BACKPLATE..... 1

FRONT MAST 2

UPPER LINK..... 3

LOWER LINK..... 4

REAR MAST 5

BLADE HOLDER 6

SHAKER BOX..... 7


SWING CYLINDERS..... 8

MAIN LIFT CYLINDER..... 9

BLADE HEIGHT CYLINDER..... 10

DECALS..... 11

1 BACKPLATE (BACKPLATE SHOWN FOR ILLUSTRATIVE PURPOSES ONLY)

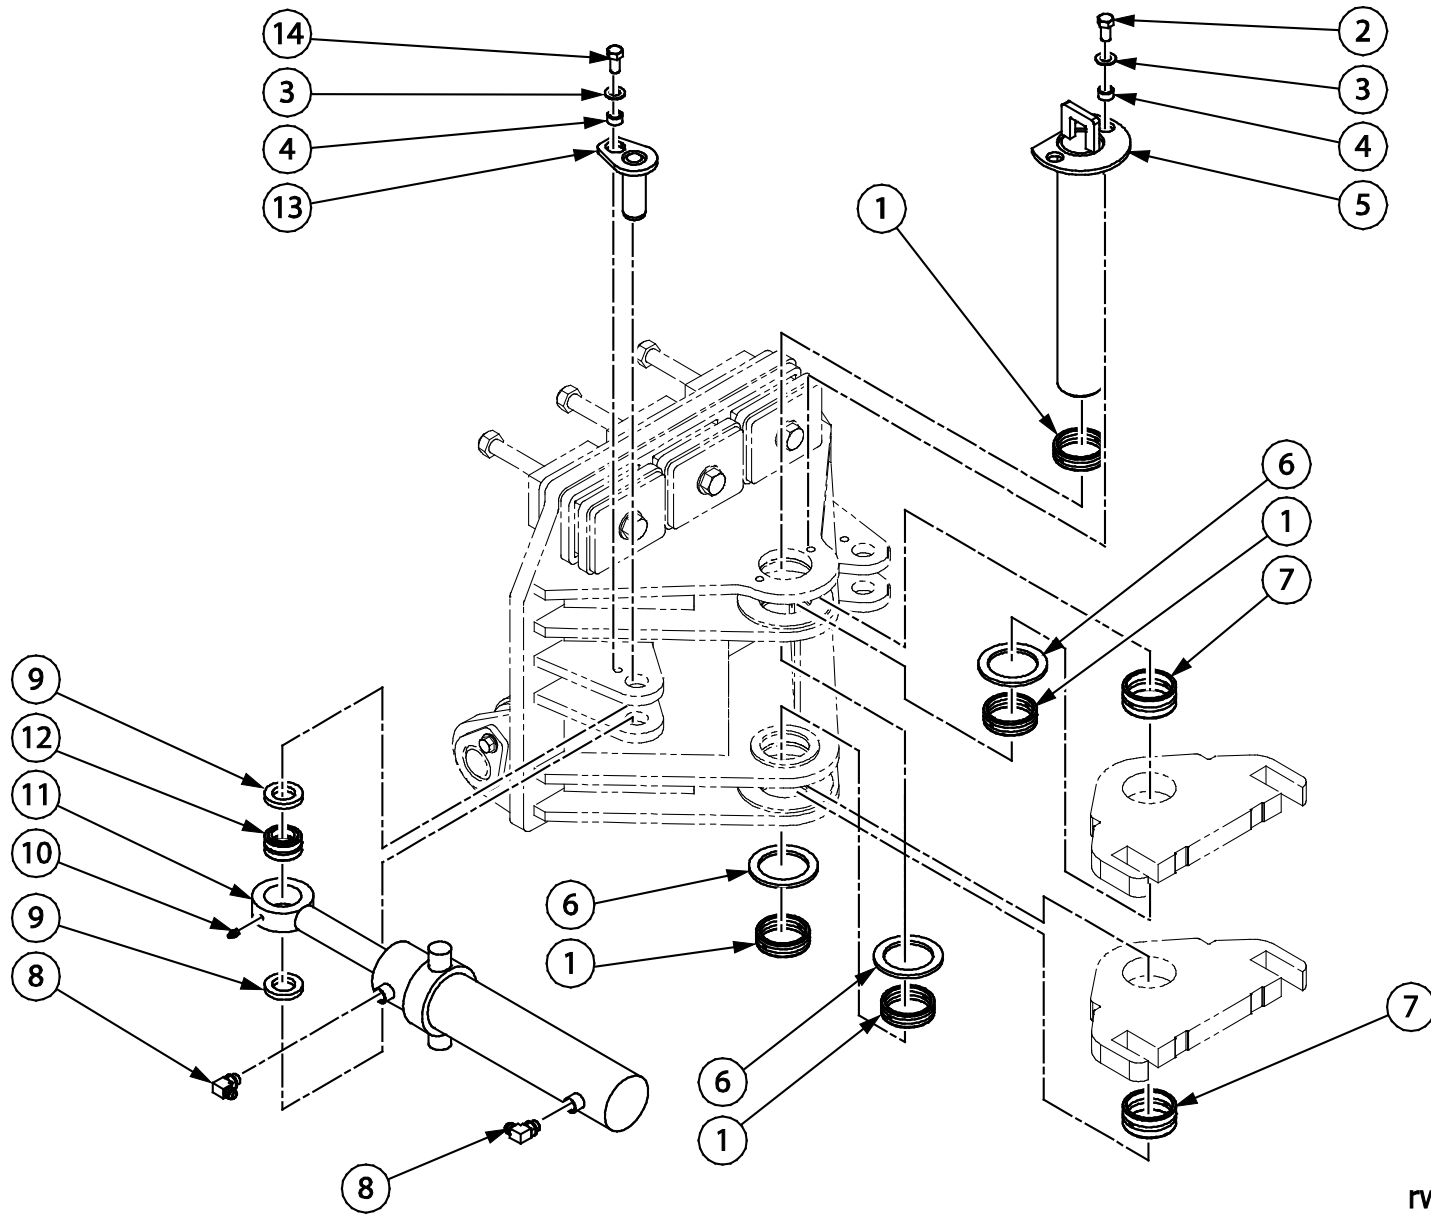


rwf_1511

1 BACKPLATE (BACKPLATE SHOWN FOR ILLUSTRATIVE PURPOSES ONLY)

V75-III


PARTS MANUAL

Item	Quantity	Part Number	Description
1	4	113154	BUSHING
2	2	80070	HEX HEAD BOLT
3	4	80581	WASHER
4	4	115057	BOLT SPACER
5	1	117741	PIN ASSEMBLY
6	3	117728	RETAINER PLATE
7	2	117674	BUSHING
8	4	90246	90° ADAPTER
9	4	16840	RUBBER SPACER
10	2	80680	STRAIGHT GREASE FITTING
11	2	13808	SWING CYLINDERS (REFER TO SECTION 8 FOR ASSEMBLY BREAKDOWN)
12	2	10722	SWIVEL BUSHING
13	2	10494	PIN ASSEMBLY
14	2	80089	HEX HEAD BOLT

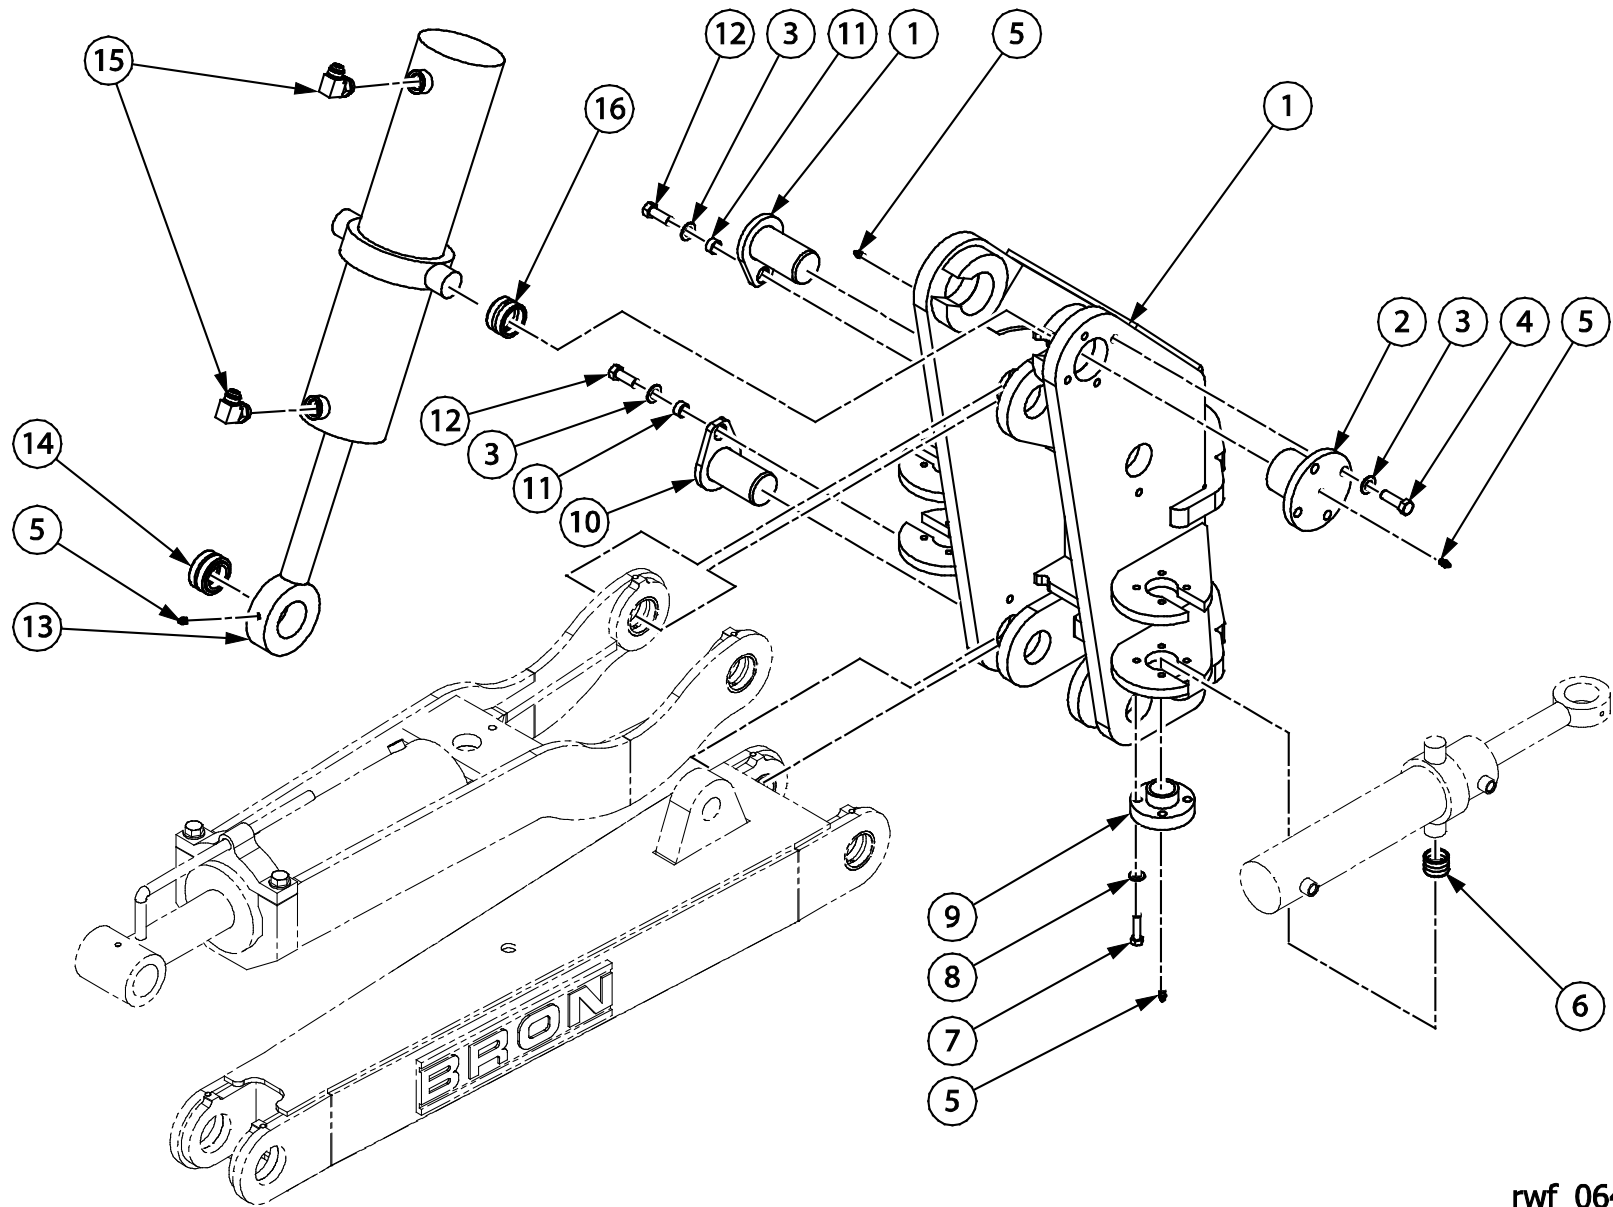


rwf_0644

Item	Quantity	Part Number	Description
1	1	31218	MAIN MAST WELDMENT
2	2	17850	LIFT CYLINDER TRUNNION ROUND BAR
3	12	80581	WASHER
4	8	80092	HEX HEAD BOLT
5	7	80680	STRAIGHT GREASE FITTING
6	4	116808	BUSHING
7	8	80073	HEX HEAD BOLT
8	8	80580	WASHER
9	4	13877	SWING CYLINDER TRUNNION PLATE
10	4	17838	PIN ASSEMBLY
11	4	115057	BOLT SPACER
12	4	80091	HEX HEAD BOLT
13	1	13809	LIFT CYLINDER (SEE SECTION 9 FOR ASSEMBLY BREAKDOWN)
14	1	10729	SWIVEL BUSHING
15	2	90251	90° ADAPTER
16	2	15352	BUSHING

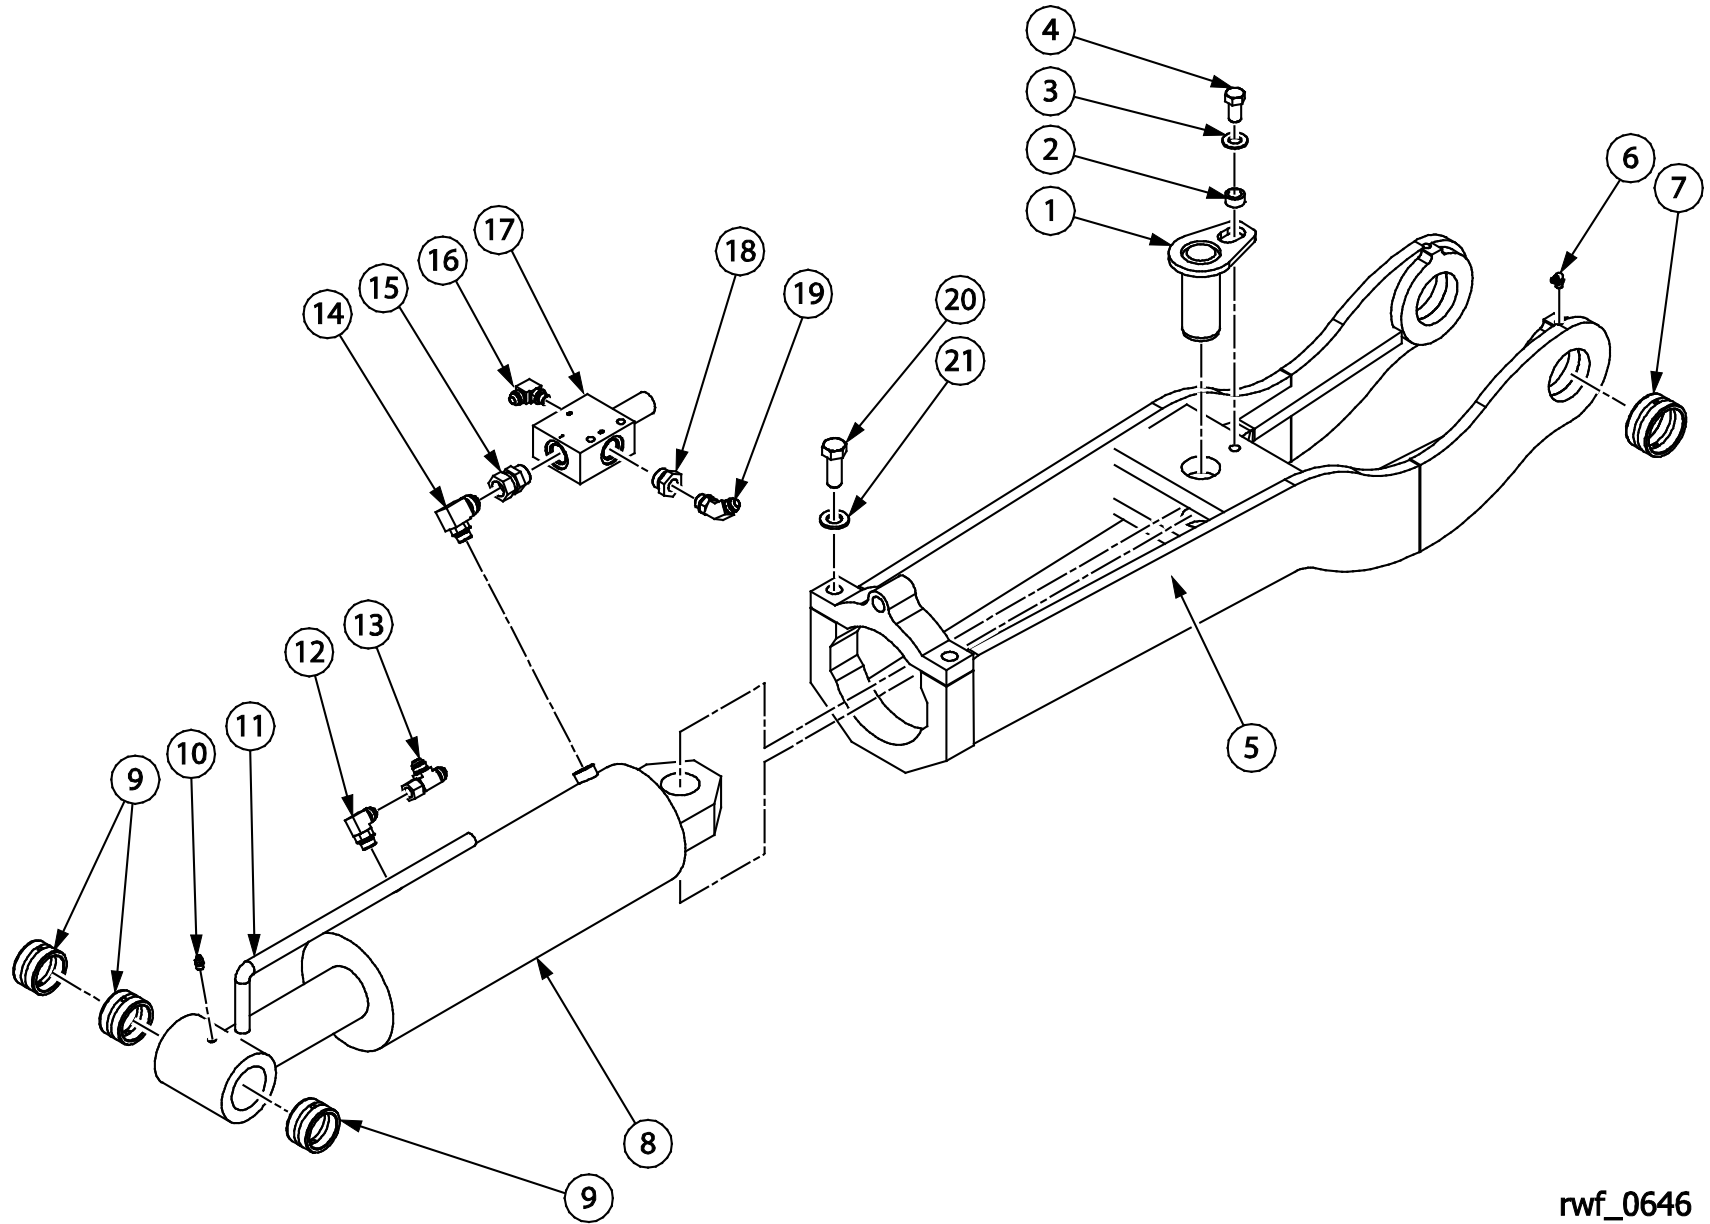


rwf_0646

Item	Quantity	Part Number	Description
1	1	13891	PIN ASSEMBLY
2	1	115057	BOLT SPACER
3	1	80581	WASHER
4	1	80089	HEX HEAD BOLT
5	1	30492	UPPER LINK WELDMENT
6	2	80682	90° GREASE FITTING
7	2	16323	BUSHING
8	1	20238	ATTITUDE CYLINDER
9	3	15352	• BUSHING
*	1	11180	• SEAL KIT
10	1	80680	STRAIGHT GREASE FITTING
11	1	17784	INDICATOR ROD
12	1	90246	90° ADAPTER
13	1	90413	SWIVEL TEE
14	1	90247	90° ADAPTER
15	1	90993	STRAIGHT ADAPTER
16	1	90244	90° ADAPTER
17	1	14816	HOLDING VALVE
18	1	90956	STRAIGHT REDUCER
19	1	90232	45° ADAPTER
20	2	80111	HEX HEAD BOLT
21	2	80582	WASHER

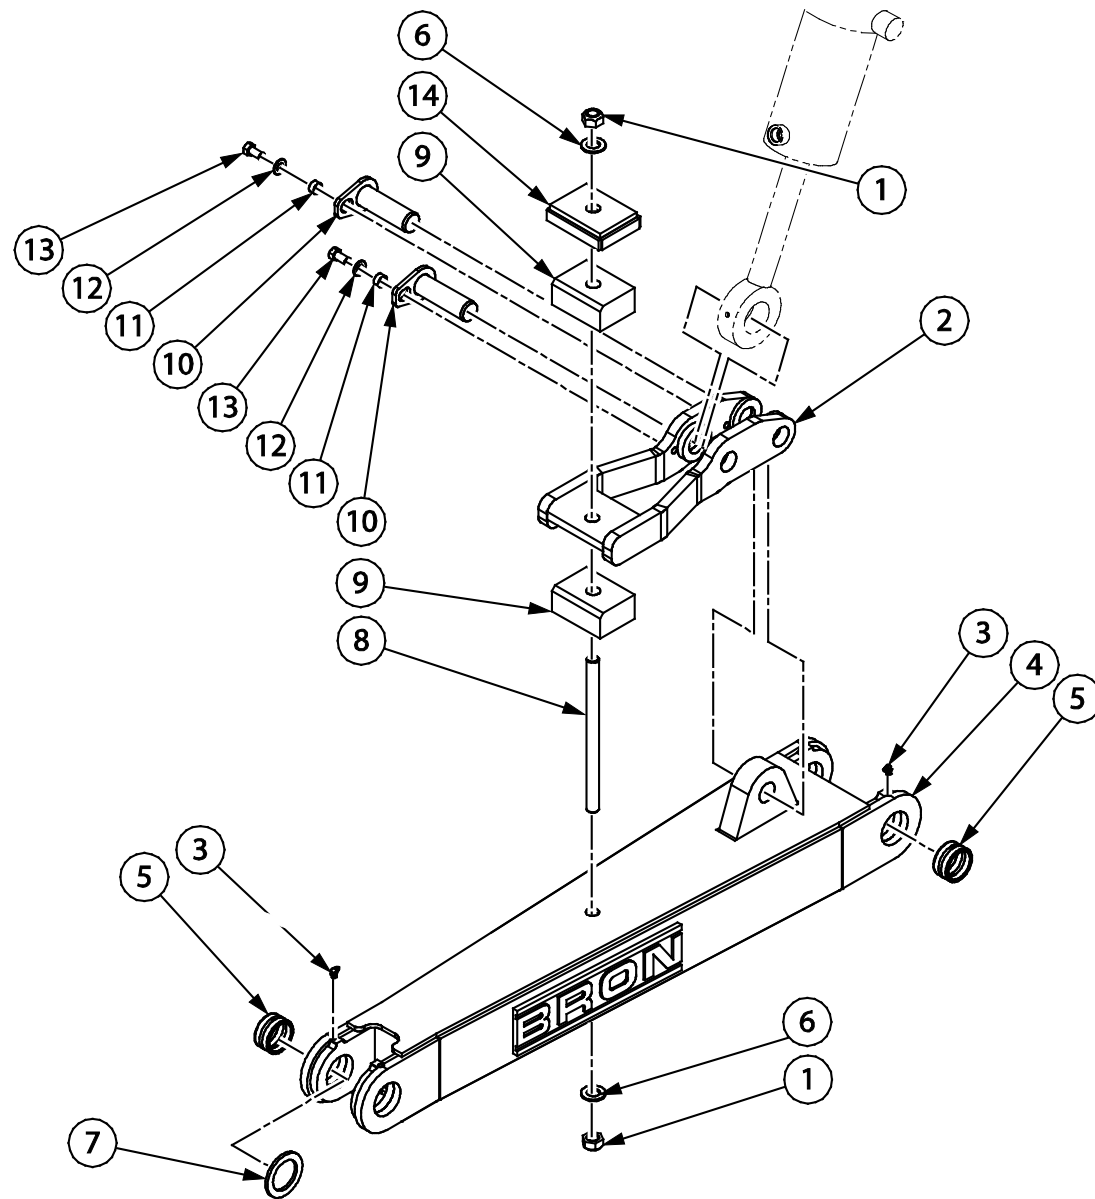


rwf_0647

Item	Quantity	Part Number	Description
1	2	80519	LOCK NUT
2	1	17831	PIVOT ARM WELDMENT
3	4	80682	90° GREASE FITTING
4	1	30493	LOWER LINK WELDMENT
5	4	16323	BUSHING
6	2	80584	WASHER
7	2	17795	BOSS
8	1	17835	THREADED ROD
9	2	16192	RED ISOLATOR
10	2	10498	PIN ASSEMBLY
11	2	115057	BOLT SPACER
12	2	80581	WASHER
13	2	80089	HEX HEAD BOLT
14	1	17834	TOP PLATE WELDMENT

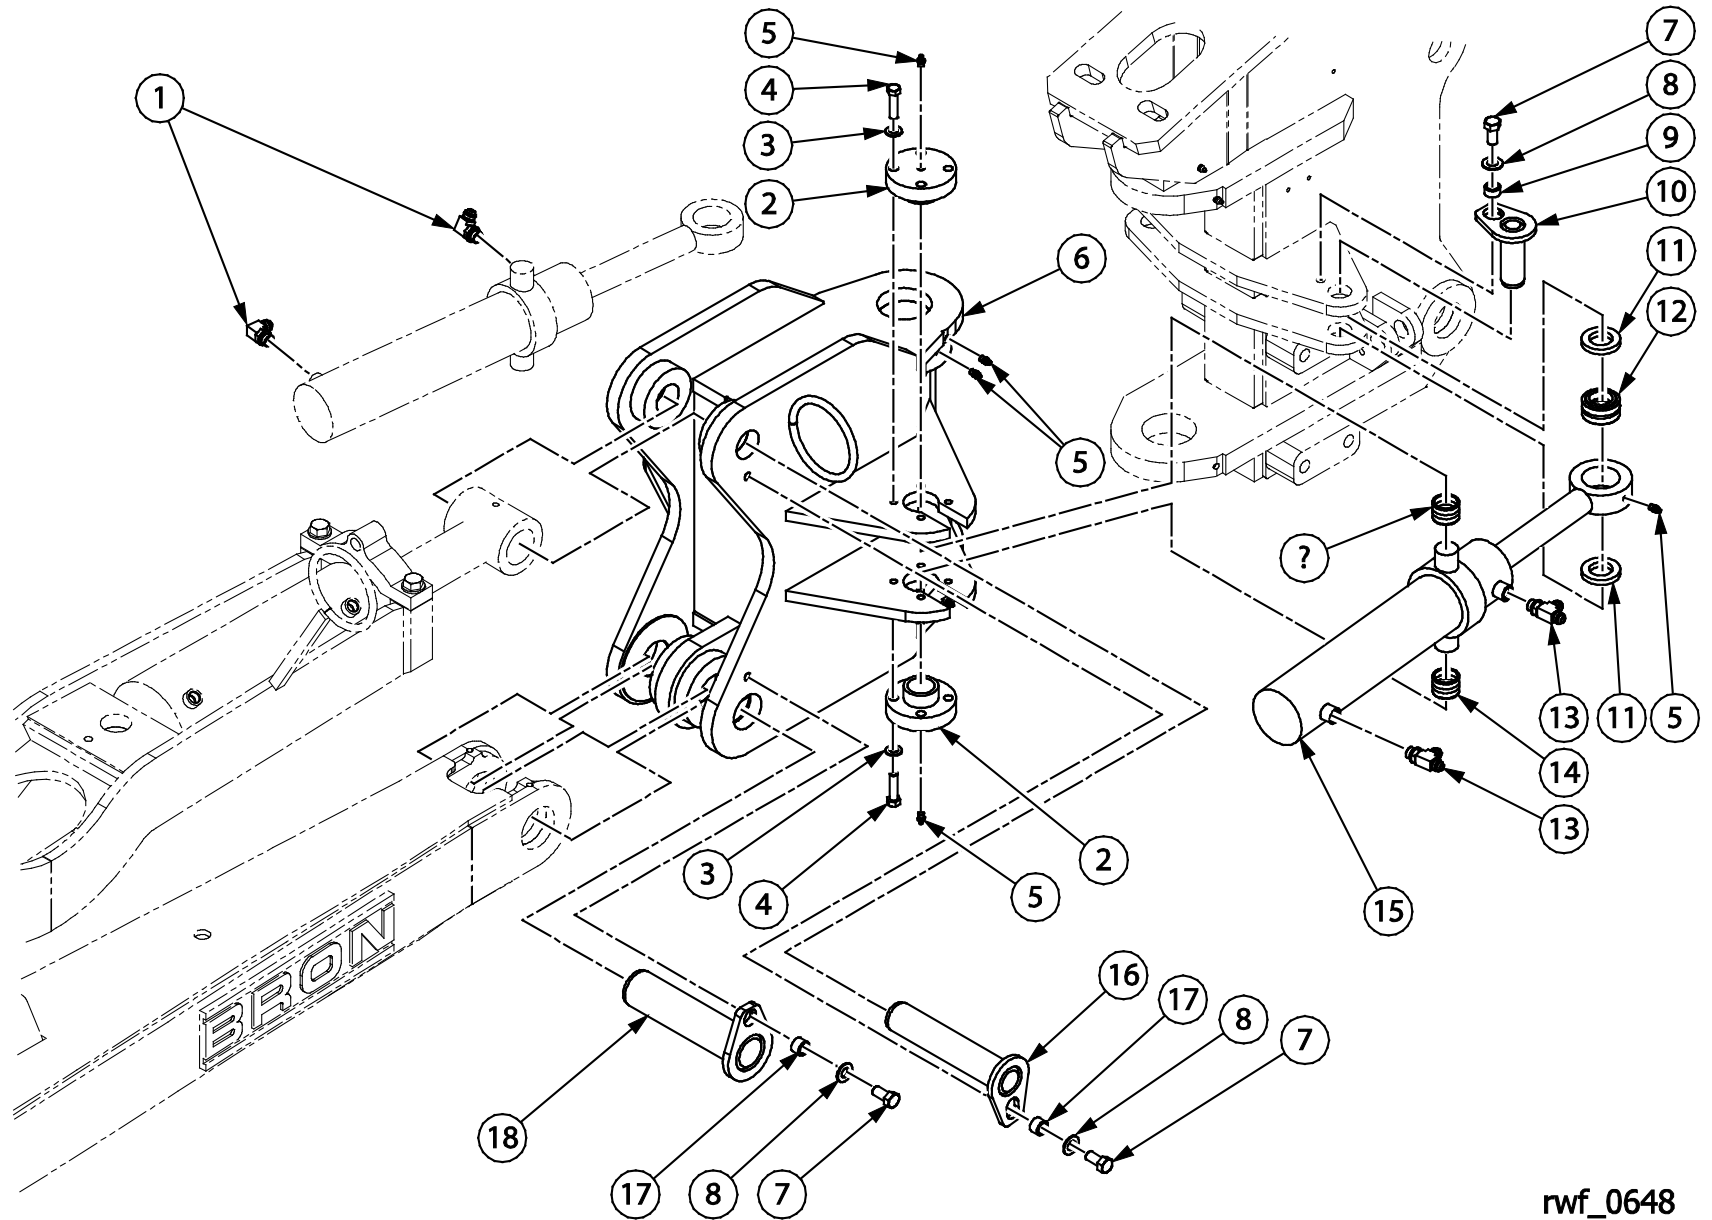


rwf_0648

Item	Quantity	Part Number	Description
1	2	90246	90° ADAPTER
2	4	13877	SWING CYLINDER TRUNNION PLATE
3	16	80580	WASHER
4	16	80073	HEX HEAD BOLT
5	11	80680	STRAIGHT GREASE FITTING
6	1	31230	REAR MAST WELDMENT
7	4	80089	HEX HEAD BOLT
8	4	80581	WASHER
9	2	115057	BOLT SPACER
10	2	10494	PIN ASSEMBLY
11	4	16840	RUBBER SPACER
12	2	10722	SWIVEL BUSHING
13	4	90524	RUN TEE
14	4	116808	BUSHING
15	2	13808	SWING CYLINDERS (SEE SECTION 8 FOR ASSEMBLY BREAKDOWN)
16	1	17855	PIN ASSEMBLY
17	2	114862	BOLT SPACER
18	1	17840	PIN ASSEMBLY

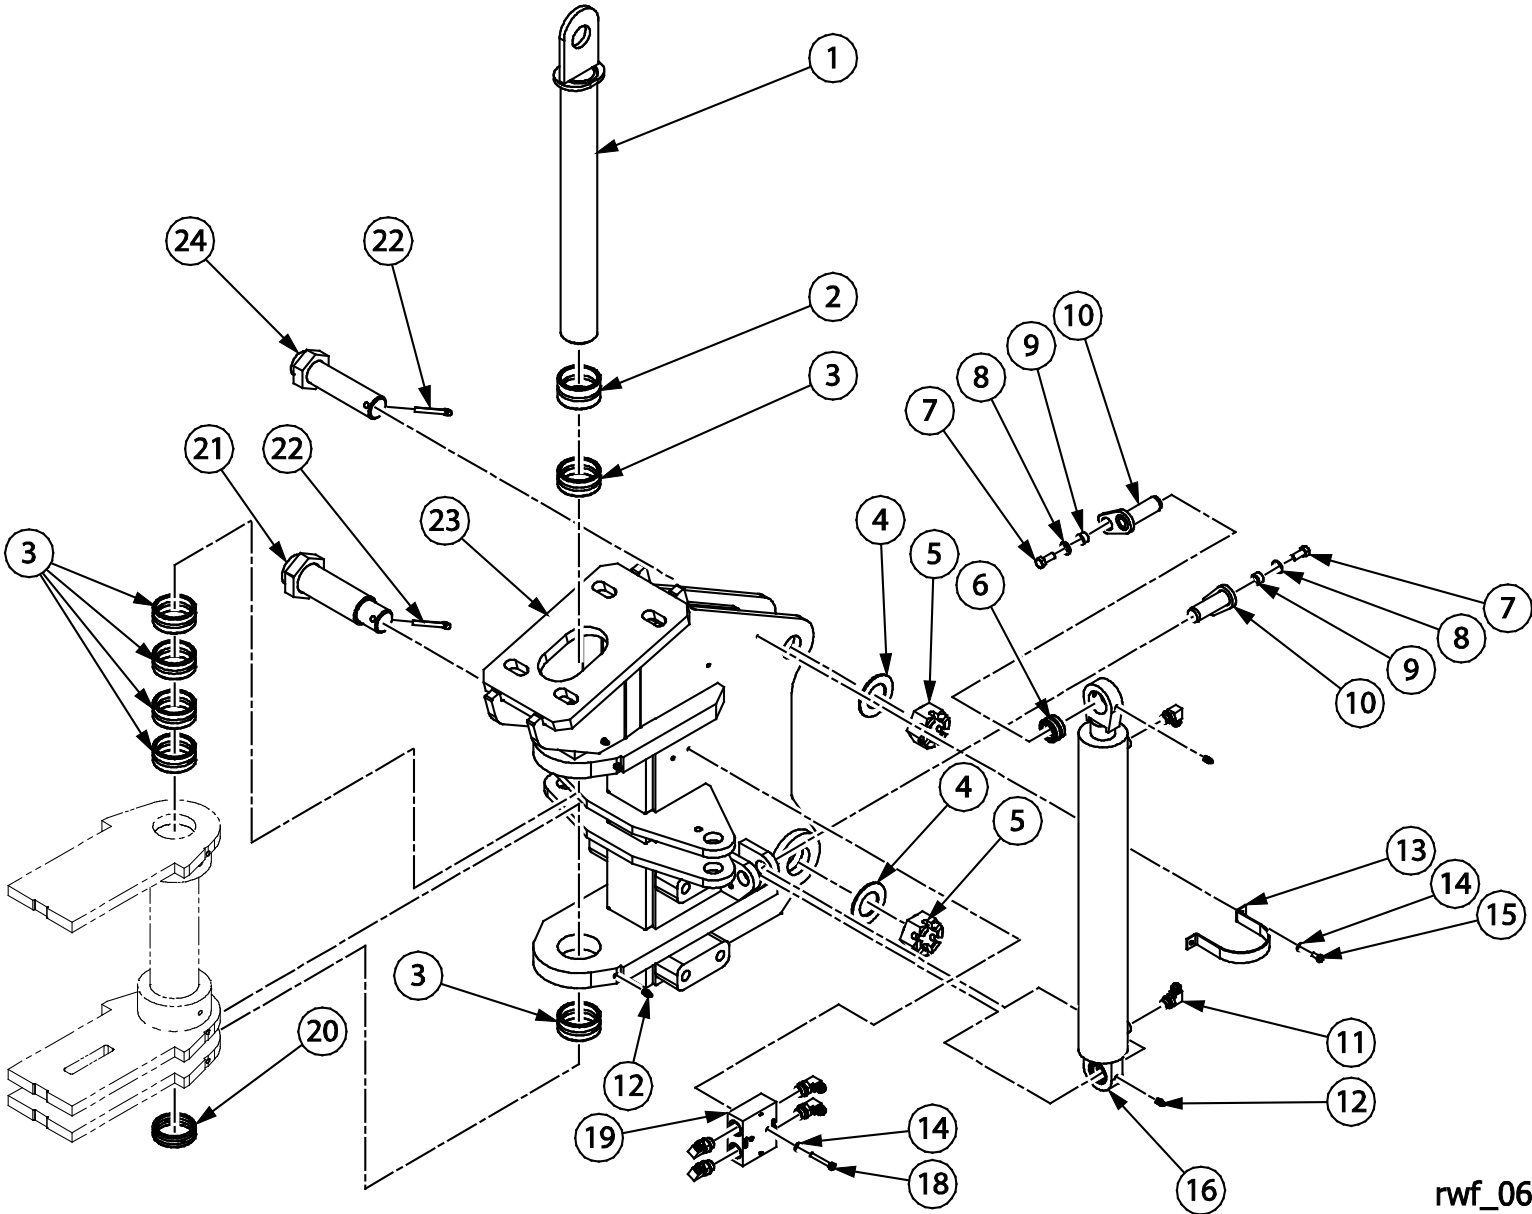


rwf_0649

Item	Quantity	Part Number	Description
1	1	117738	PIN ASSEMBLY
2	1	15181	BUSHING
3	6	117674	BUSHING
4	2	80587	WASHER
5	2	81544	SLOTTED NUT
6	2	12981	SWIVEL BUSHING
7	2	80070	HEX HEAD BOLT
8	2	80580	WASHER
9	2	115800	BOLT SPACER
10	2	12977	PIN ASSEMBLY
13	1	13175	BLADE HEIGHT CYLINDER GUARD
14	4	80577	WASHER
15	2	80014	HEX HEAD BOLT
16	1	12910	BLADE HEIGHT CYLINDER (SEE SECTION 10 FOR ASSEMBLY BREAKDOWN)
18	2	80020	HEX HEAD BOLT
19	1	13161	DOUBLE LOCK VALVE
20	1	113154	BUSHING
21	1	17848	PIN WELDMENT
22	2	80660	COTTER PIN
23	1	31220	BLADE HOLDER WELDMENT
24	1	10710	PIN ASSEMBLY

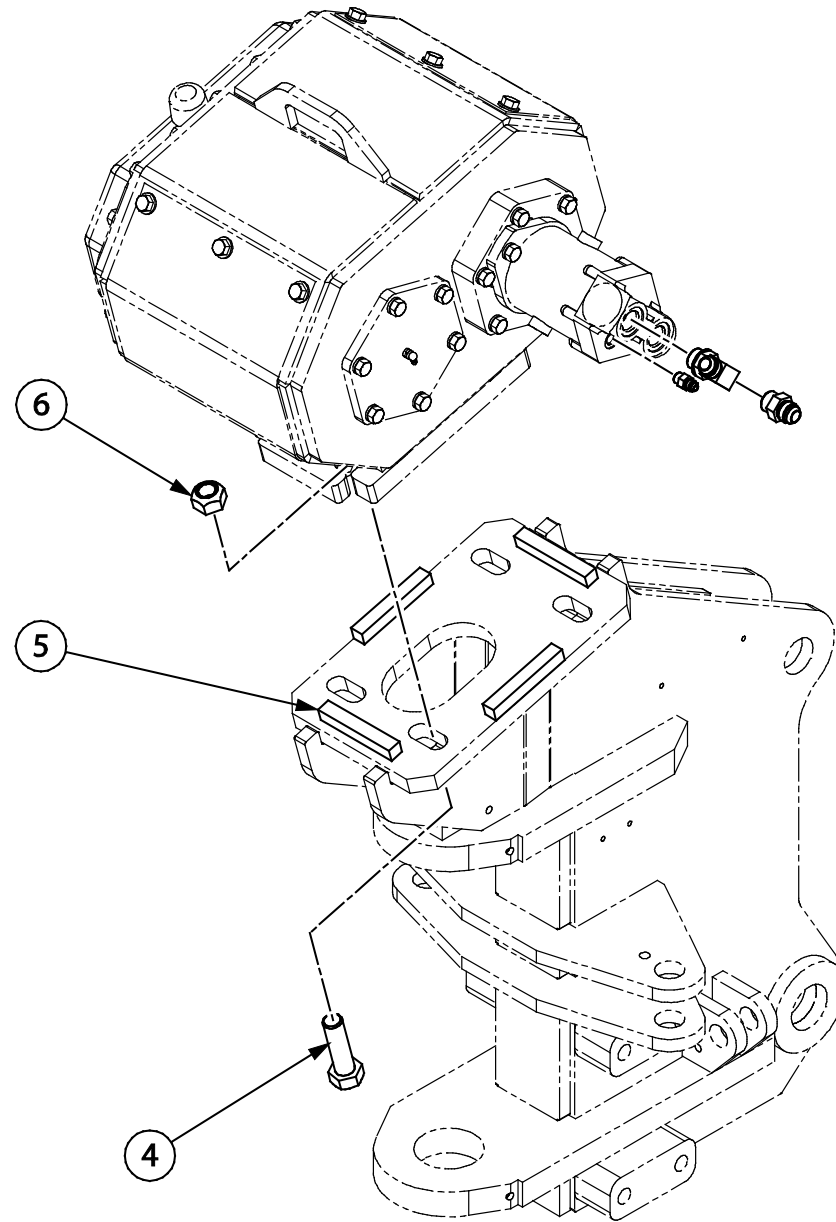

rwf_0651


Item	Quantity	Part Number	Description
4	4	16625	HEX HEAD BOLT
5	4	12430	KEYSTOCK
6	4	16626	LOCK NUT

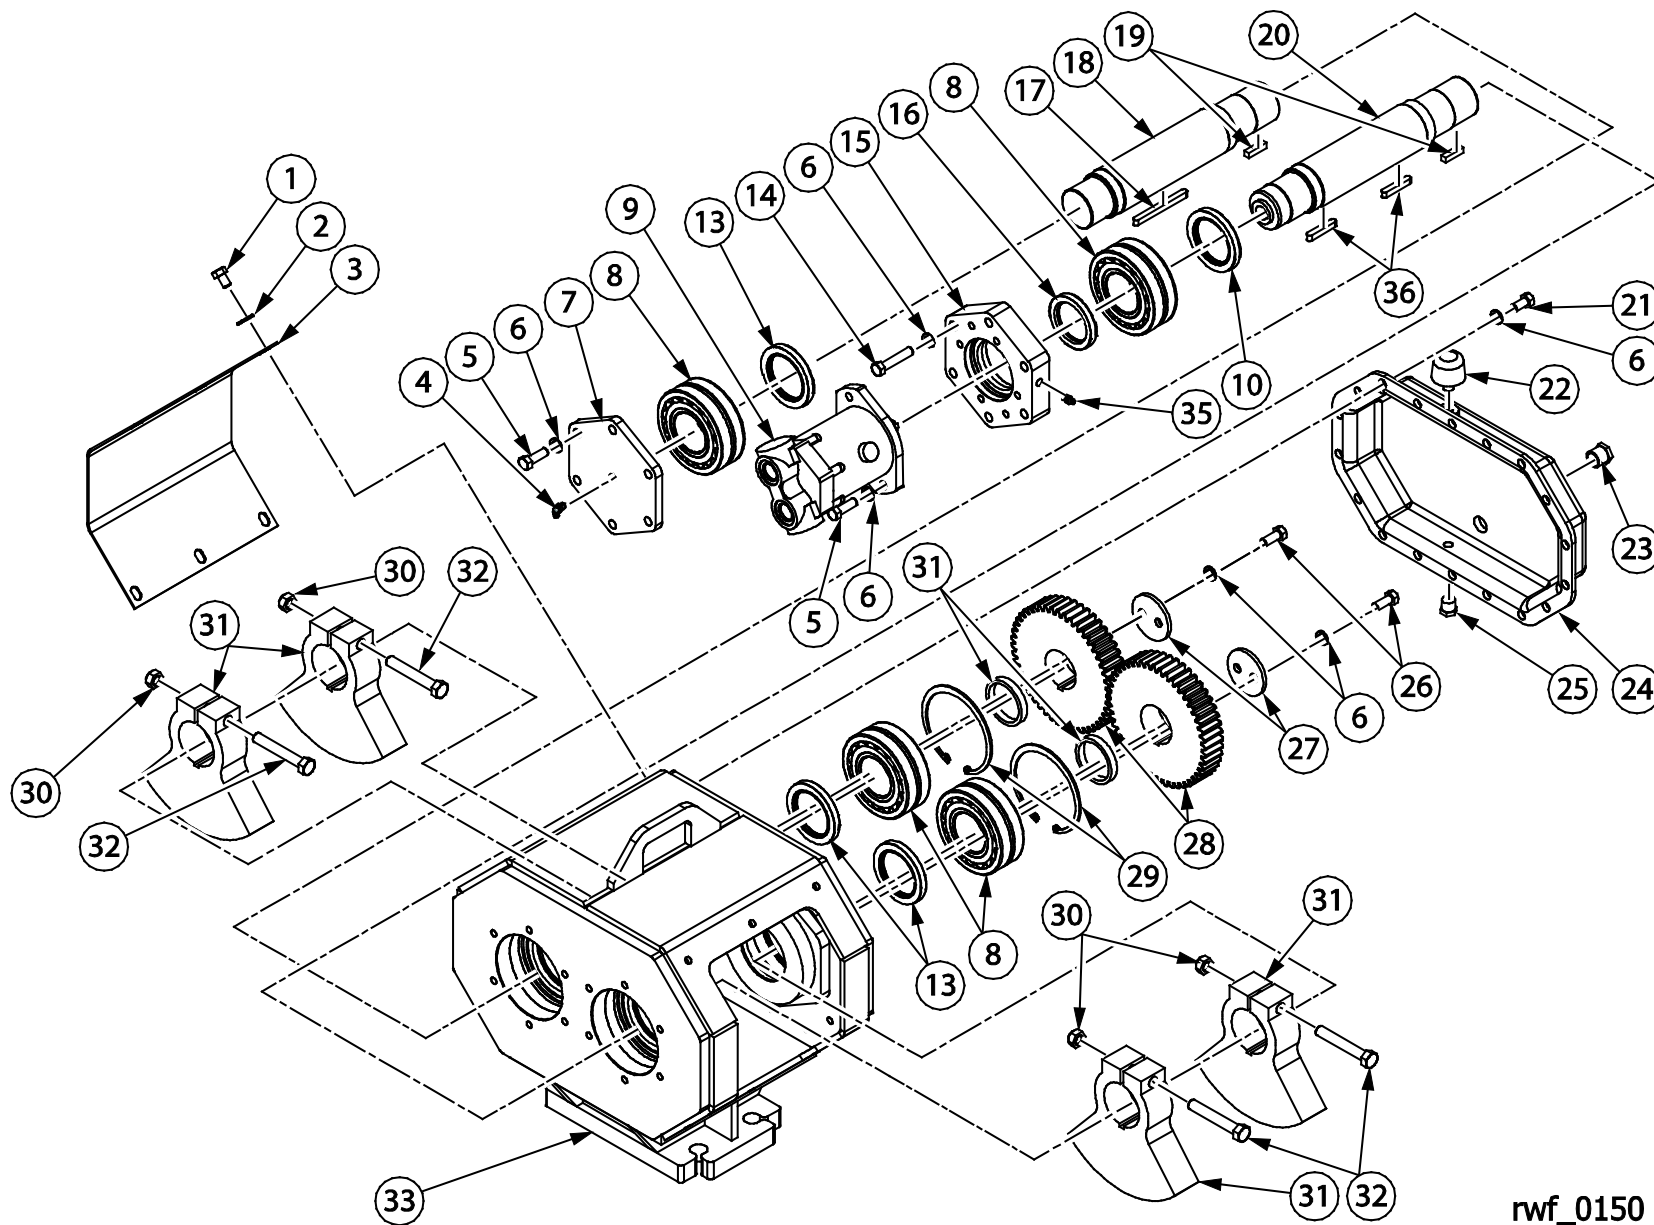

rwf_0150


Item	Quantity	Part Number	Description
1	12	80068	HEX HEAD BOLT
2	12	80580	WASHER
3	2	20609	COVER
4	1	80682	90° GREASE FITTING
5	8	80071	HEX HEAD BOLT
6	36	80567	LOCK WASHER
7	1	20617	BLIND COVER
8	4	14776	SHAKER BEARING
9	1	11028	SHAKER BOX HYDRAULIC MOTOR
10	0.68 L	99-00004	GEAR OIL
13	4	14777	SHAKER SHAFT OIL SEAL
14	6	80075	HEX HEAD BOLT
15	1	20616	SHAKER DRIVE COVER PLATE
16	1	14798	SHAKER SHAFT OIL SEAL
17	1	14781	KEY
18	1	20606	DRIVEN SHAFT
19	2	14782	KEY
20	1	20605	SHAKER DRIVE SHAFT
21	18	80069	HEX HEAD BOLT
22	1	17003	BREATHER
23	1	12044	FLUID LEVEL GAUGE
24	1	30387	GEAR COVER
25	1	14786	PLUG
26	4	80070	HEX HEAD BOLT
27	2	14779	END PLATE
28	2	20607	SHAKER GEAR
29	2	14778	SHAKER RETAINING RING
30	4	80516	LOCK NUT
31	4	20608	SHAKER WEIGHT
32	4	80100	HEX HEAD BOLT
33	1	31462	SHAKER BOX
34	2	14783	SHAKER SPACER
35	1	80680	STRAIGHT GREASE FITTING

Item	Quantity	Part Number	Description
36	2	14780	KEY

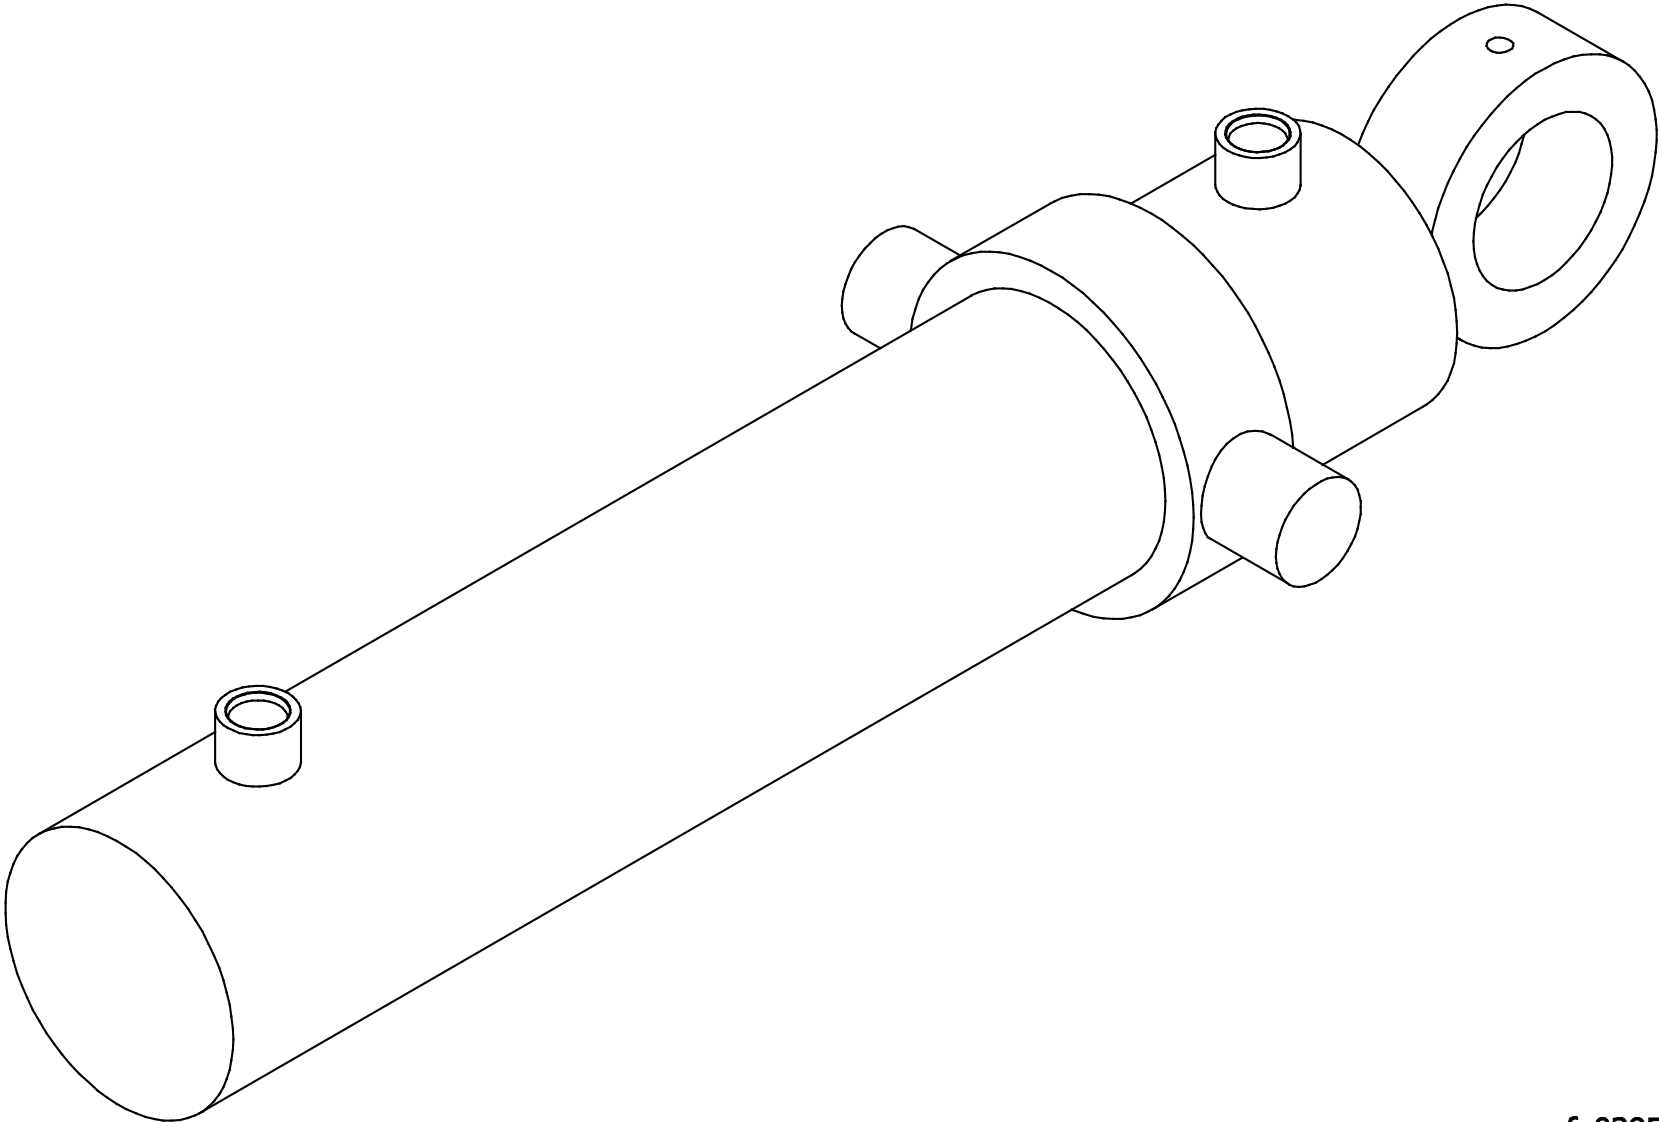


rwf_0395

Item	Quantity	Part Number	Description
1	1	14122	BARREL WELDMENT
2	1	10719	STOVER NUT
3	1	14124	PISTON
4	1	14123	ROD WELDMENT
5	1	14125	GLAND
6	1	80680	STRAIGHT GREASE FITTING
7	1	10722	SWIVEL BUSHING
8	1	14126	SEAL KIT

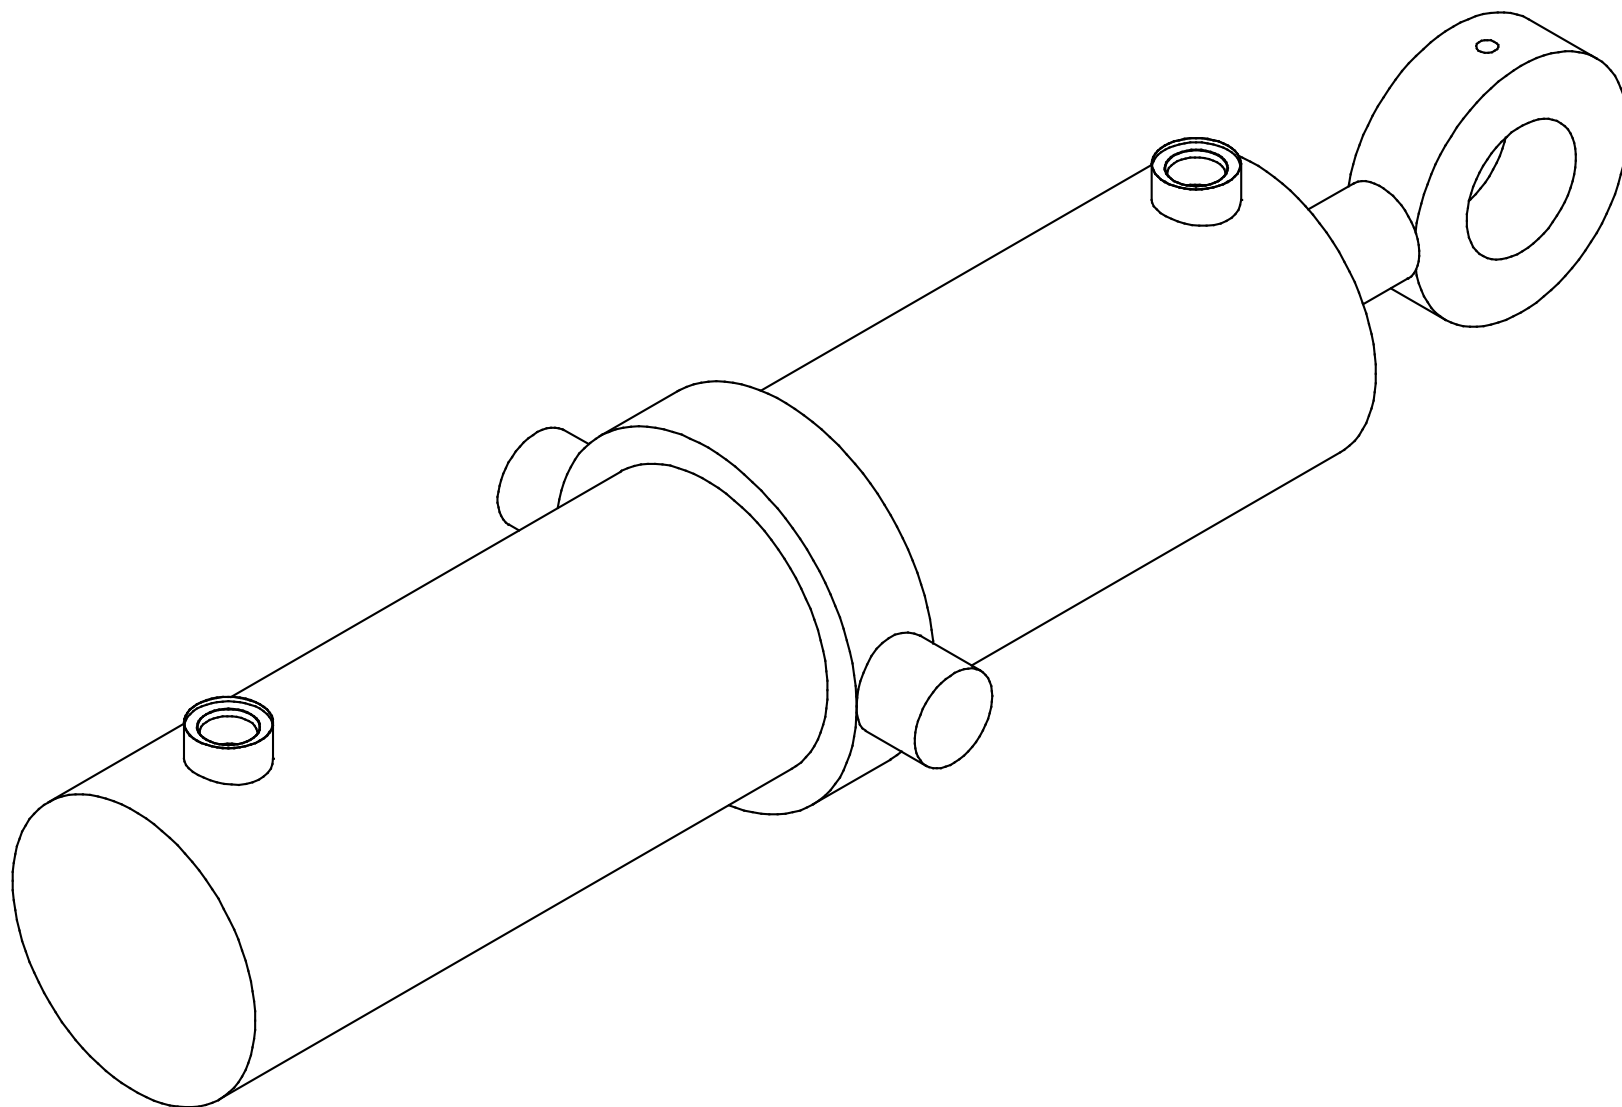


rwf_0652

Item	Quantity	Part Number	Description
1	1	14117	BARREL WELDMENT
2	1	10726	STOVER NUT
3	1	14119	PISTON
4	1	14118	ROD WELDMENT
5	1	14120	GLAND
6	1	80680	STRAIGHT GREASE FITTING
7	1	10729	SWIVEL BUSHING
8	1	14121	SEAL KIT

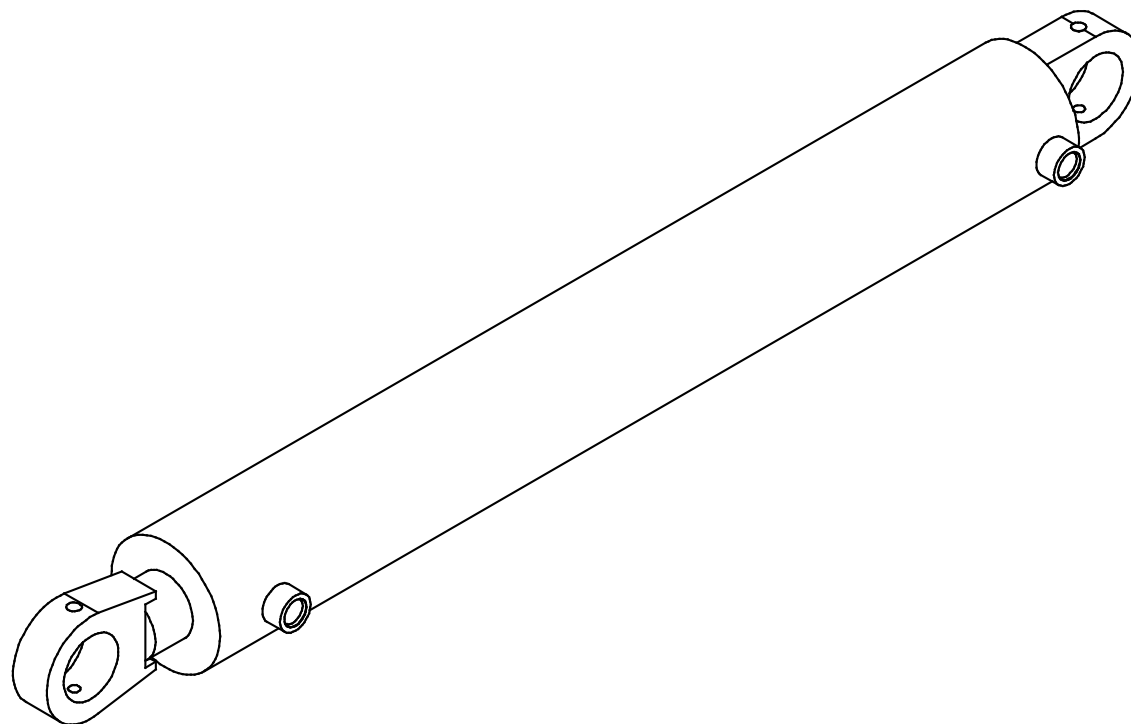

rwf_0154

Item	Quantity	Part Number	Description
1	2	12981	SWIVEL BUSHING
2	1	13450	SEAL KIT

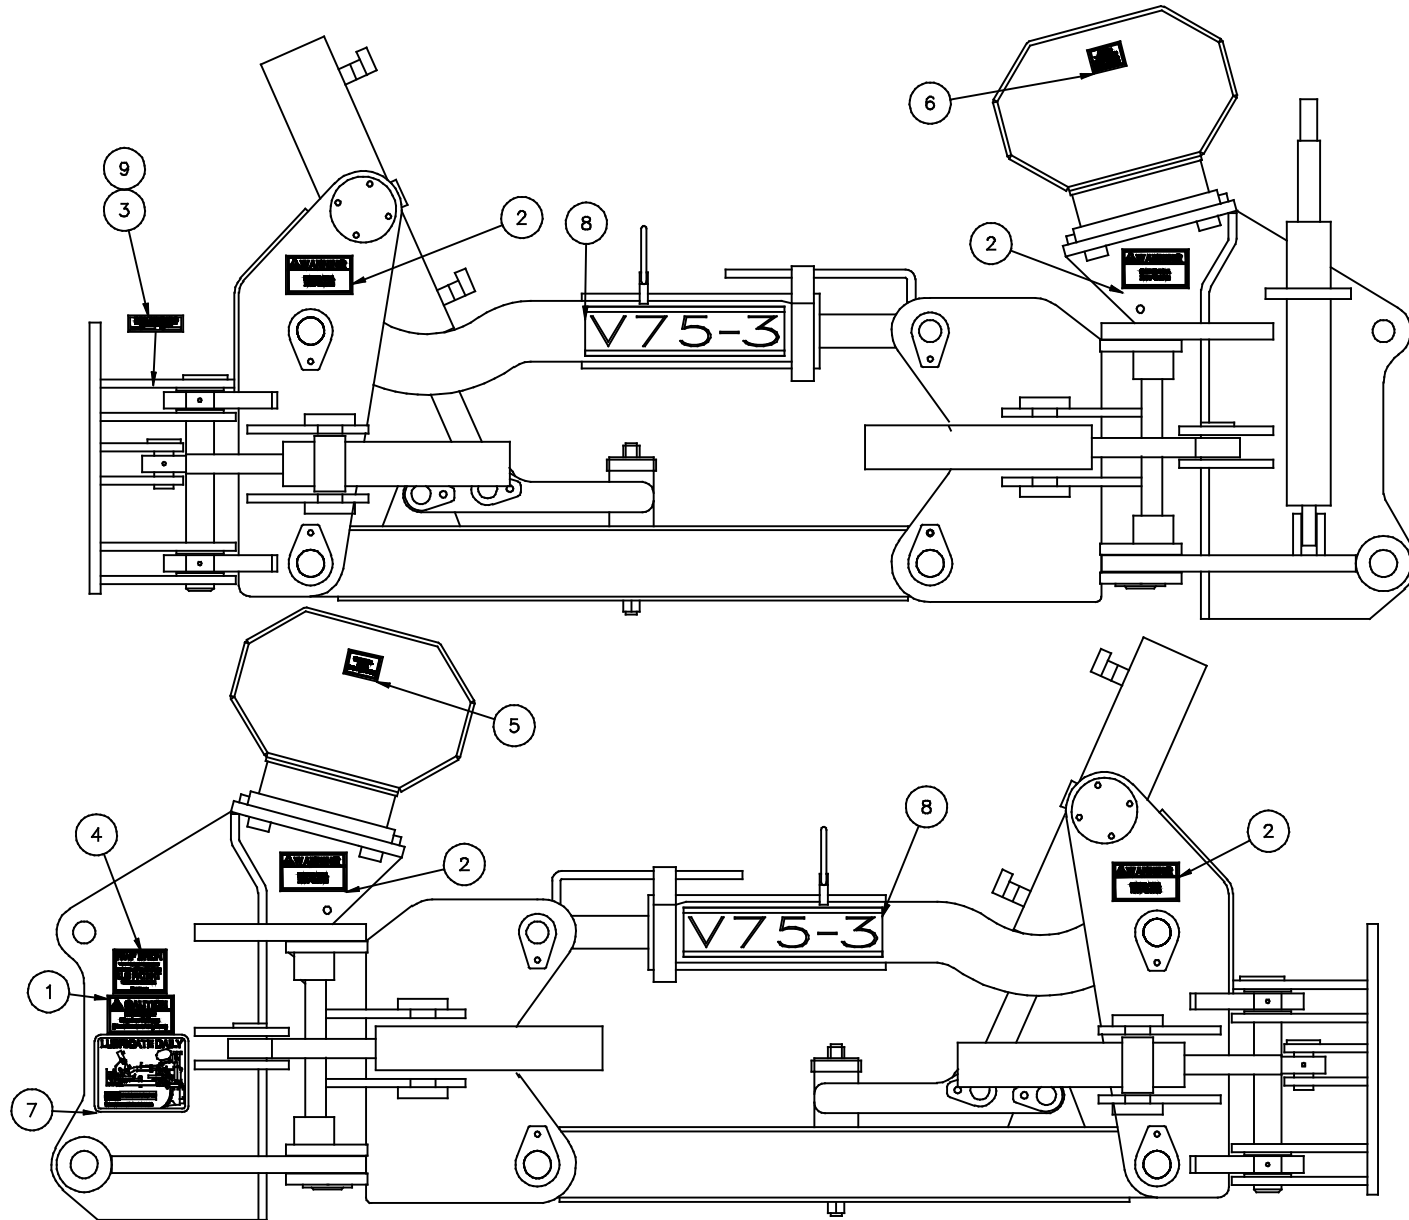

rwf_0803

Item	Quantity	Part Number	Description
1	1	11982	WARNING NO WELDING DECAL
2	4	11983	WARNING SWING AREA DECAL
3	REF	REF	SERIAL PLATE FOR REFERENCE ONLY *PART CANNOT BE ORDERED*
4	1	16923	PATENT PENDING DECAL
5	1	16943	CHECK OIL DAILY DECAL
6	1	16944	GREASING DECAL
7	1	17162	LUBRICATE DAILY DECAL
8	2	117077	V75-3 DECAL
9	2	80770	RIVET